

MAGEWELL®

# ULTRA ENCODE

User Manual, Reference and FAQ



Ultra Encode  
MAGEWELL®

# TABLE OF CONTENTS

<b>Introduction</b>	03	Sign In/Out	18
Key Features	04	Dashboard	19
System Requirements	04	Streaming Server	22
<b>Tutorial</b>	05	General	39
Part 1. Ultra Encode Setup	05	Encoding Parameters	45
Part 2. YouTube Setup	09	EDID	49
<b>Installation</b>	10	Network	52
Safety Information	10	Firmware	55
FCC Compliance Statement	11	User Admin	57
Interfaces & Indicators	12	About	60
<b>Get Started With Ultra Encode</b>	15	<b>FAQ</b>	61
Access Web UI	15	<b>Support</b>	63
Initialization	16	<b>Warranty</b>	64
<b>Web UI Configuration</b>	17	<b>Notice</b>	66
Access the Web UI	17		

# Introduction



Our Ultra Encode family of universal live media encoders offers systems integrators, streaming professionals, and OEM partners a flexible and affordable encoding solution for applications including live streaming, AV over IP, remote contribution, IP production workflows and much more. Available in HDMI and SDI models, Ultra Encode supports high-quality H.264, H.265 (HEVC) and NDI®|HX encoding and multiple streaming protocols with wired or wireless network connectivity.

Encoder converts input signal to a user-defined format, using H.264/H.265 video encoders and AAC audio encoder. It can push multiple streams to RTSP/RTMP/RTMPS/SRT Caller/SRT Listener/NDI|HX2/HLS(push)/TS over UDP/TS over RTP video servers simultaneously that you have access to.

Encoder is ideal for broadcast video and audio, natively support live broadcast for Facebook, YouTube, and Twitch, as well as your own site, with multi-platform distribution. To customize encoder perfectly for your session, we have Web UI, where device work status, a thumbnail preview window and tabs for streaming settings, analytics, and stream health monitoring are provided.

## Key Features

- Support RTSP/RTMP/RTMPS/SRT Caller/SRT Listener/NDI|HX2/HLS (push)/TS over UDP/TS over RTP streaming protocols
- Dual stream encoding
- Multi-streaming to various video platforms simultaneously
- Video encoders - H.264 and H.265 (HEVC)
- Audio encoder - AAC
- Web UI - a remote network management system - provides webpage configuration with kinds of customization for device functions, including
  - [Dashboard](#) provides real-time device performance status monitor.
  - [Streaming Server](#) provides live stream server configuration.
  - [General](#) provides general settings of your device.
  - [Encoding Parameters](#) provides wizards to configure encoding profile.
  - [Network](#) provides network management and configuration.
  - [Firmware](#) provides online and manual update to refresh device firmware.
  - [User Admin](#) provides user management.
  - [About](#) provides device information and configuration report for troubleshooting.

## System Requirements

### Network

- 10/100/1000Mbps Ethernet
- Wi-Fi 802.11 a/b/g/n/ac
- USB 3G/4G mobile broadband modem (not included)

### Web UI Supported Web Browser

- Microsoft Internet Explorer 11
- Microsoft Edge
- Mozilla Firefox version 61 and above
- Google Chrome version 49 and above
- Apple Safari 11.1 and above
- Opera 55.0.2994.44 and above

### Ultra Encode Family

- Ultra Encode HDMI
- Ultra Encode SDI

# Tutorial

Let's learn by example.

Throughout this tutorial, we'll walk you through the creation of a basic YouTube live streaming with Ultra Encode.

It'll consist of two parts:


[Part 1. Ultra Encode setup](#)

[Part 2. YouTube setup](#)


## Part 1. Ultra Encode Setup

### 1. Find Ultra Encode

1. Connect the encoder to a LAN and power it up.
2. Connect input signal.
3. Access Web UI
  - i. In Windows 10, open a File Explorer window, find the encoder in **Network > Other Devices**.
  - ii. Double click a encoder icon to open the Web UI of the device in your default web browser.
4. Log in with your username and password.

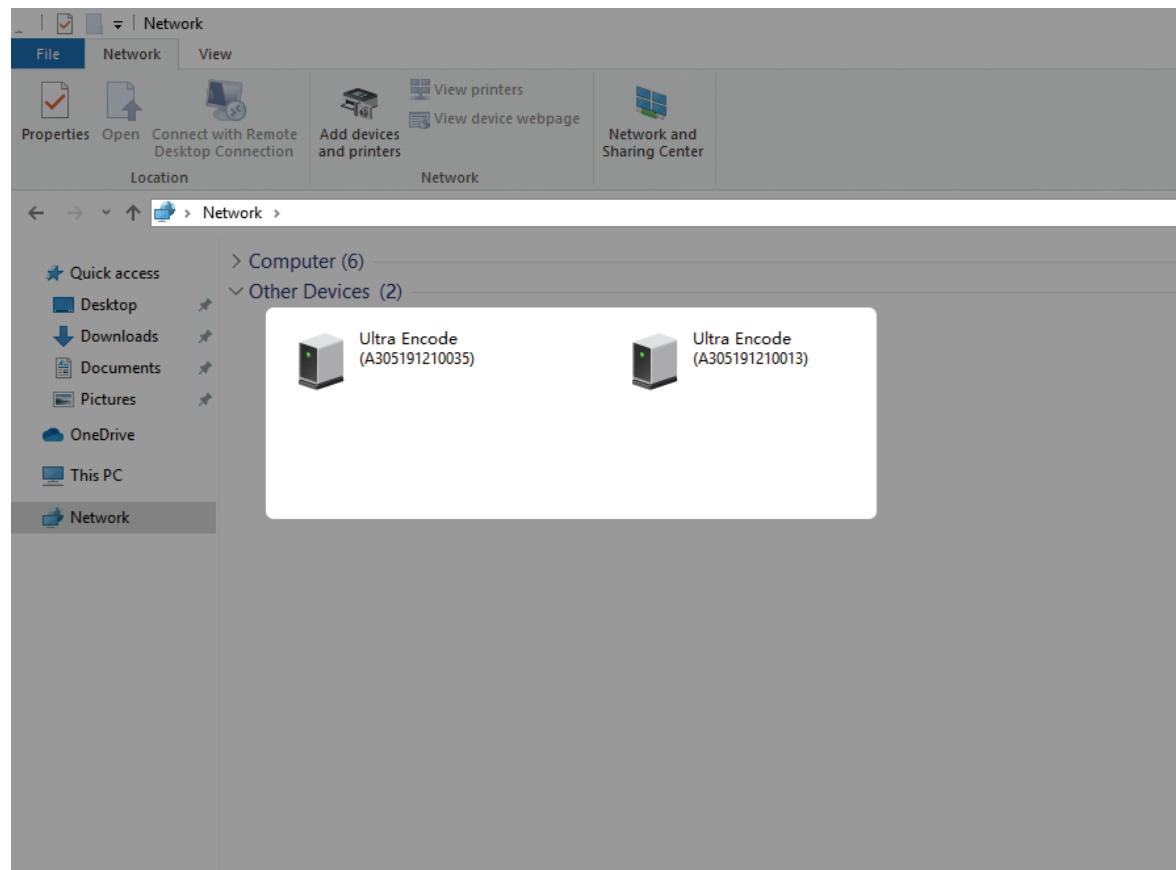


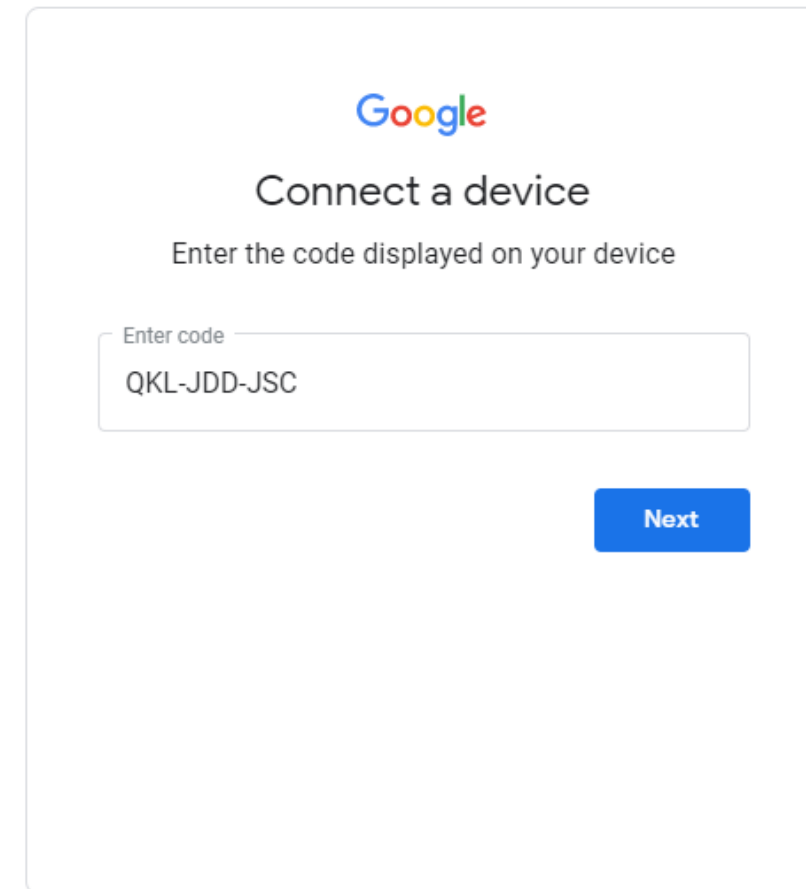
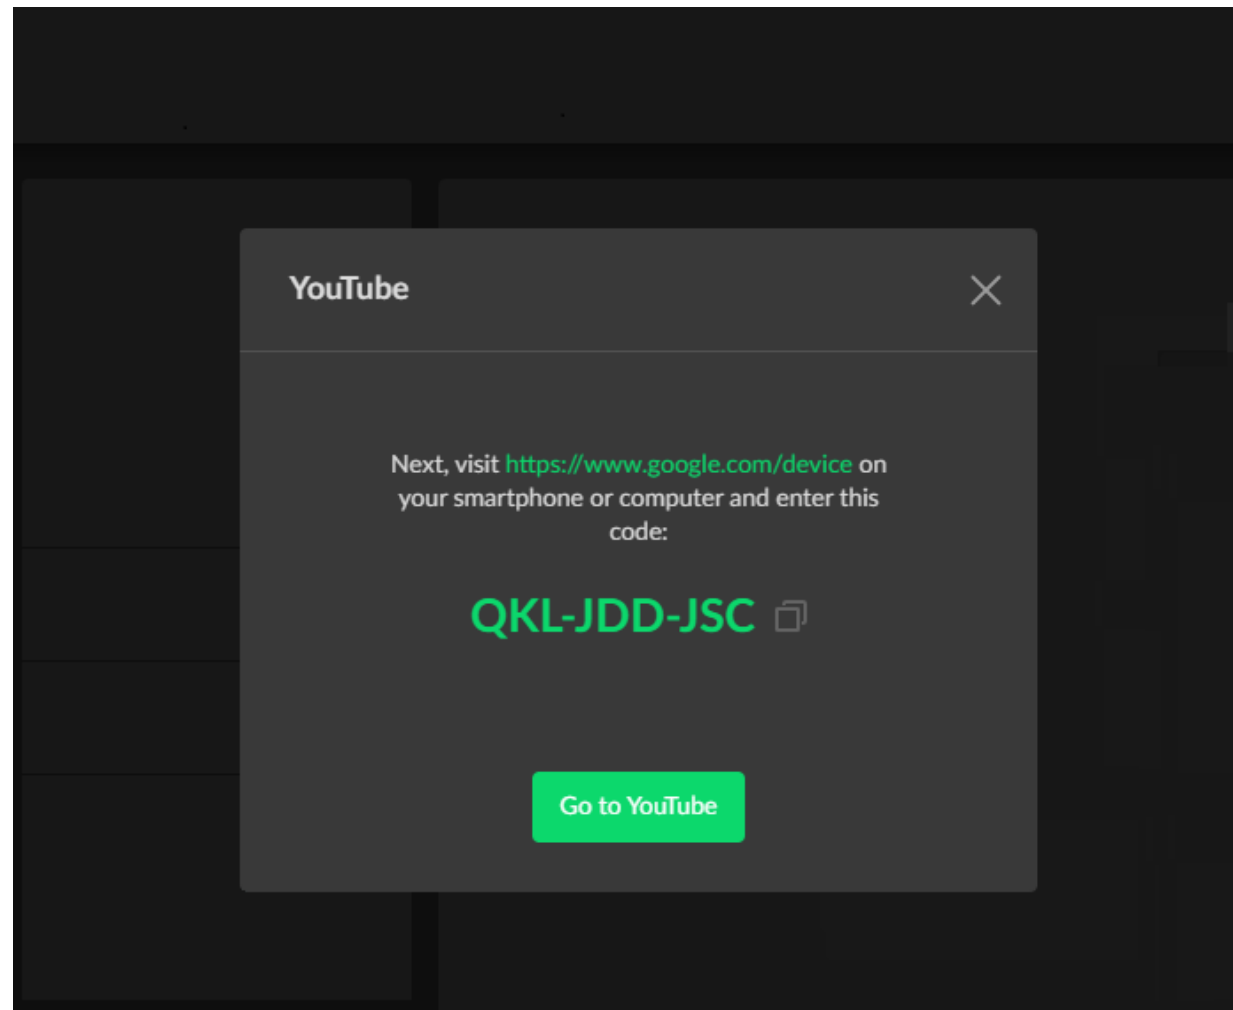
Find your Device

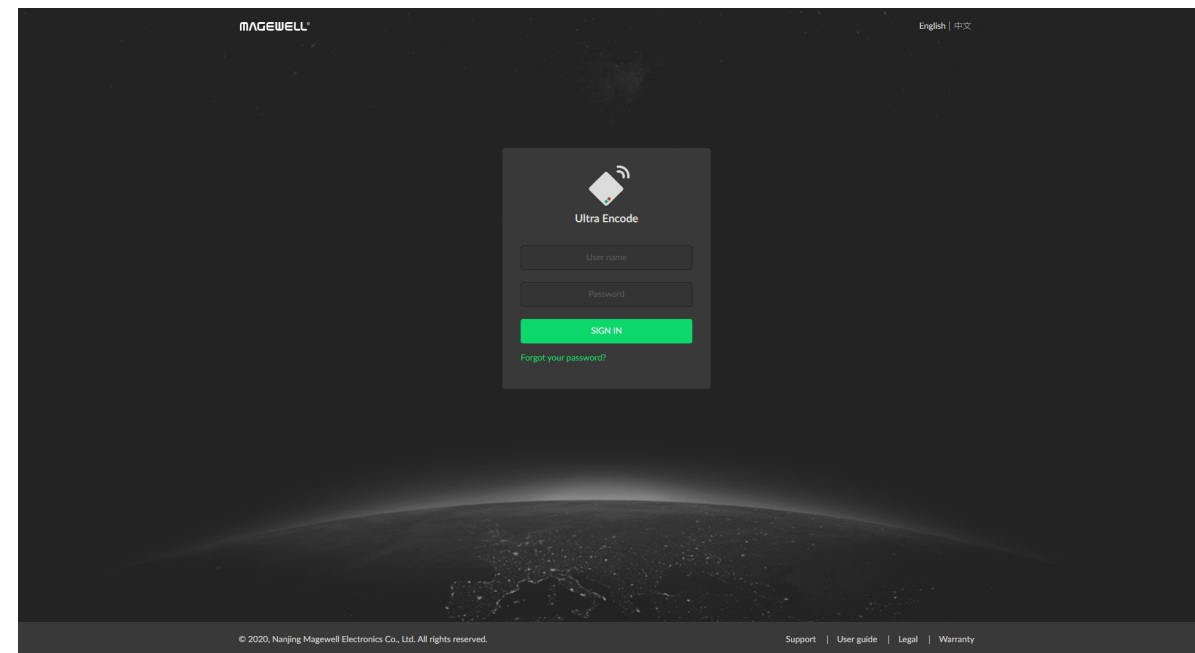



Sign In

## 2. Add YouTube streaming session

1. In the left control pane, go to **Streaming Server** tab. Click **Add Server** and choose  **YouTube** .
2. Go to YouTube <https://www.google.com/device>, and paste the code prompted.



3. Follow the page instructions to log in and trust your device.

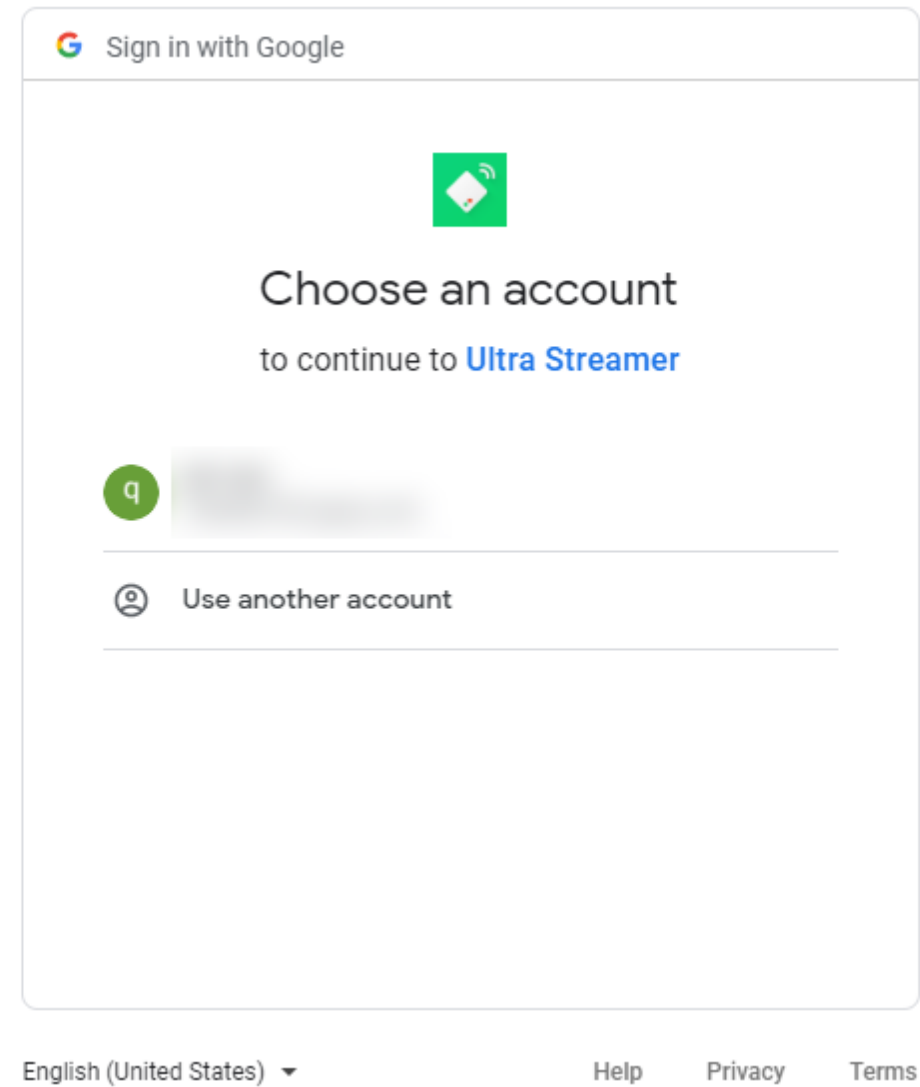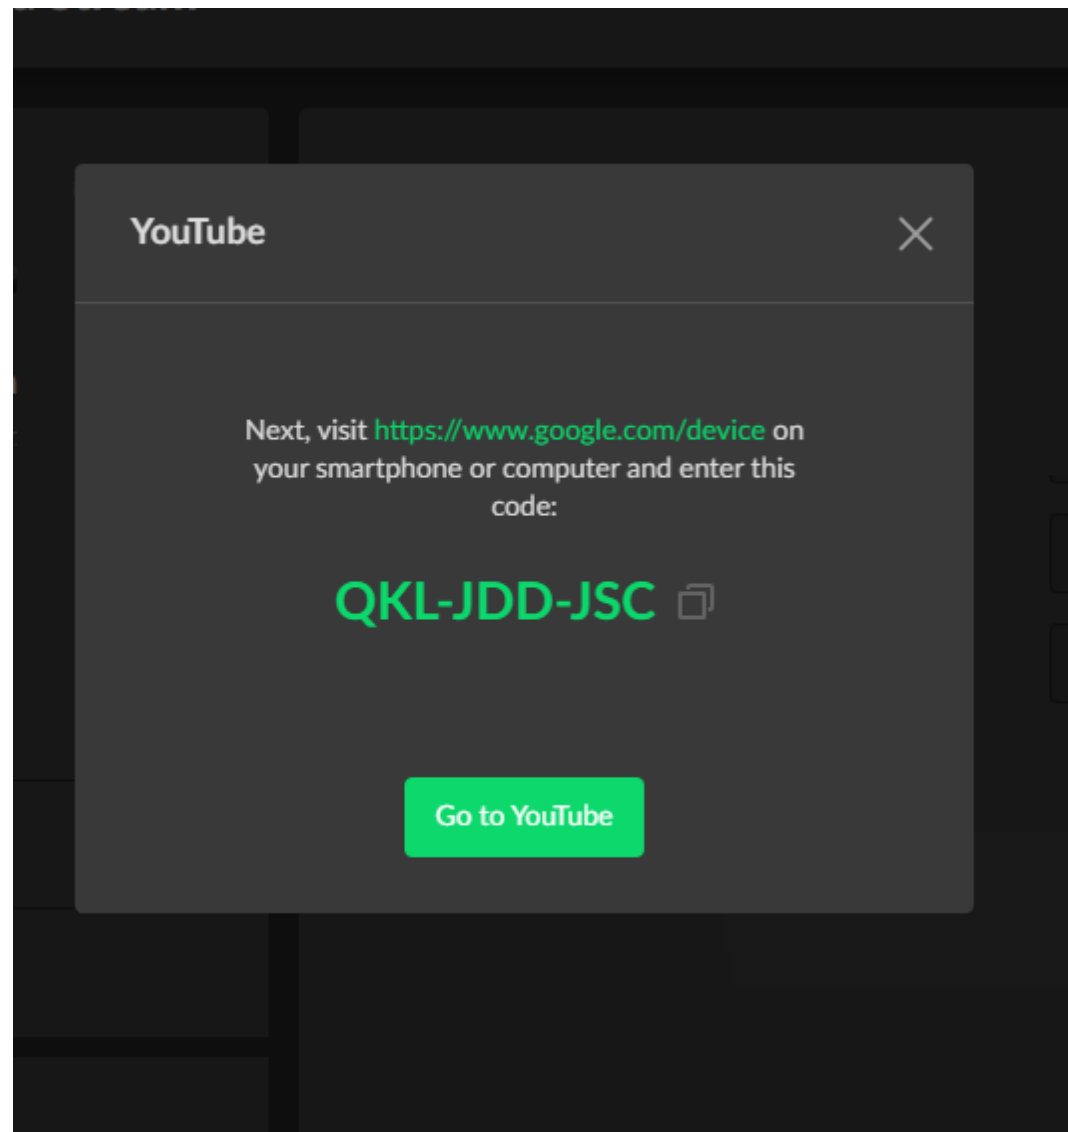

4. Choose the **Event** where you want to show your video clips.  
Then you can simply save the server with default parameters for streaming.
5. Go back to the **Streaming Server** tab and turn on the switch  before YouTube icon to start the streaming session.  
Now the encoder is ready to bring your content to YouTube directly with all these settings.



## Part 2. YouTube Setup

Create a live stream task in YouTube Studio to go live, and specify the Title, Category, Privacy, etc.

The screenshot shows the YouTube Studio interface for setting up a live stream. The main area is titled "Connect streaming software to go live" and includes a "STREAM SETUP HELP" link. The right sidebar shows the stream details: Title "Live Stream", Category "Gaming", Privacy "Private", Viewers waiting "0", and Likes "0". Below this, there are tabs for "STREAM SETTINGS", "ANALYTICS", and "STREAM HEALTH". The "STREAM SETTINGS" tab is active, showing fields for "Stream key" (Default stream key (Variable)), "Stream URL" (rtmp://), and "Backup server URL" (rtmp://). There are also "RESET" and "COPY" buttons for the stream key and URL. The "Additional settings" section includes "Enable DVR" (checked), "360° video" (unchecked), "Added delay" (None), "Closed captions" (unchecked), and "Unlist live replay once stream ends" (unchecked). The "Stream latency" section has three options: "Normal latency", "Low-latency" (selected), and "Ultra low-latency". The right sidebar also features a "Live chat" section with a welcome message and a "LEARN MORE" link. At the bottom right, there is a chat input field with a character count of "0/200".

# Installation

## Safety Information

### Electrical Safety

- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.
- Make sure that you are using the correct power adapter for the local voltage. If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.
- If the power adapter is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer for help.

### Operation Safety

- Before using the product, make sure all cables are correctly connected and the power cables are not damaged. If you notice any damage, contact your dealer immediately.
- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.
- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.
- If you encounter technical problems with the product, contact your dealer or the Magewell Support Team via [support@magewell.net](mailto:support@magewell.net).

## FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and cause undesired operation
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

## Interfaces & Indicators

### Ultra Encode HDMI

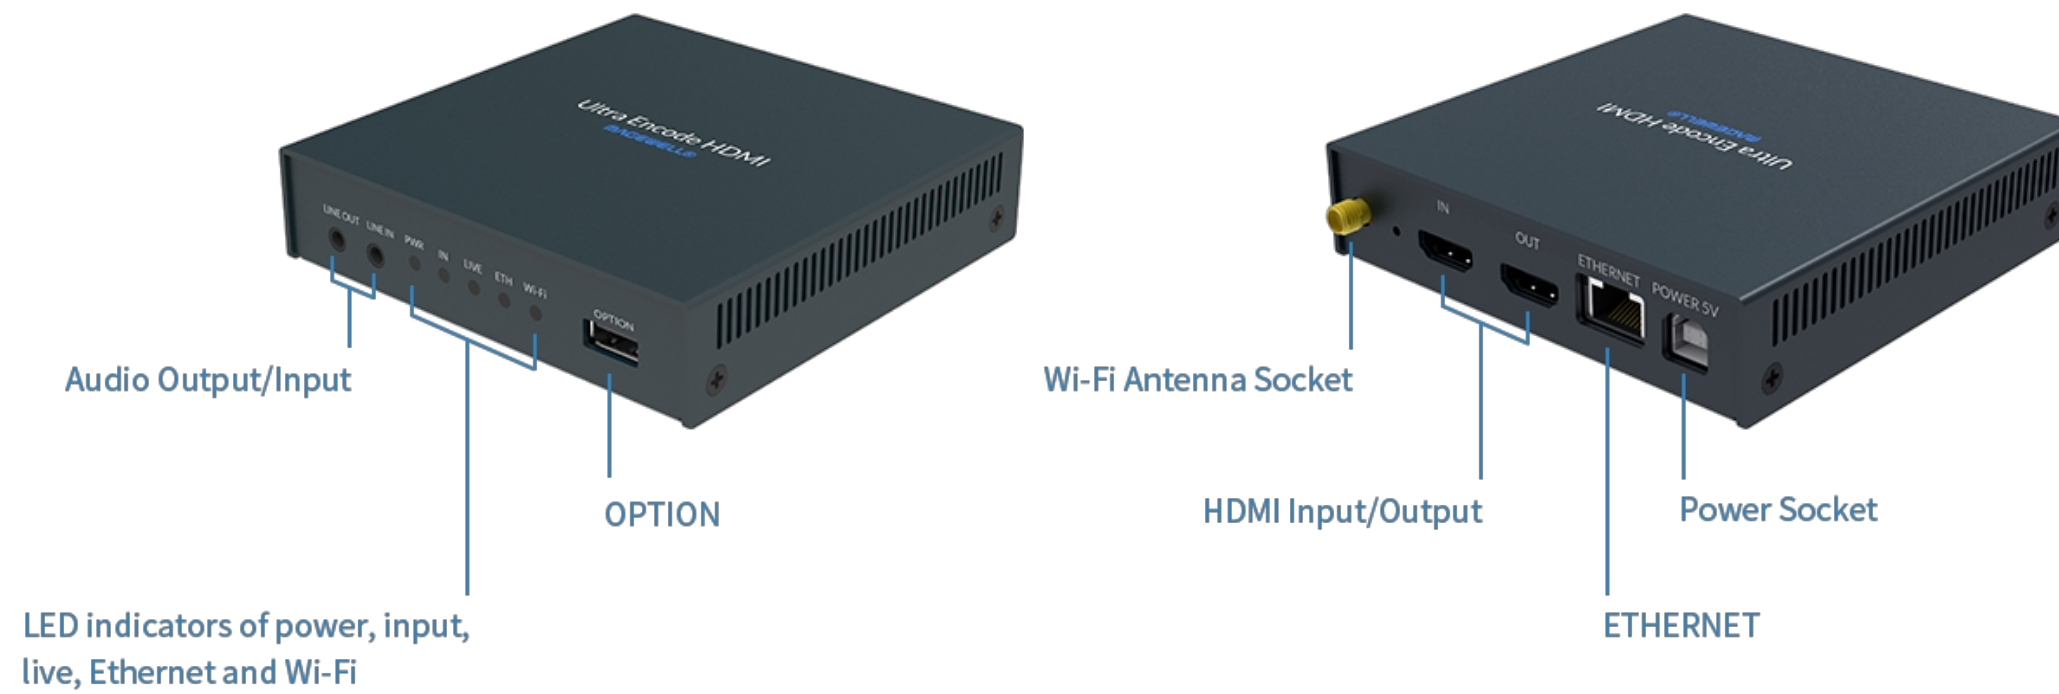


Figure 1 Ultra Encode HDMI

⚠ Plug included Wi-Fi antenna when you want to connect to a wireless network.

## Ultra Encode SDI

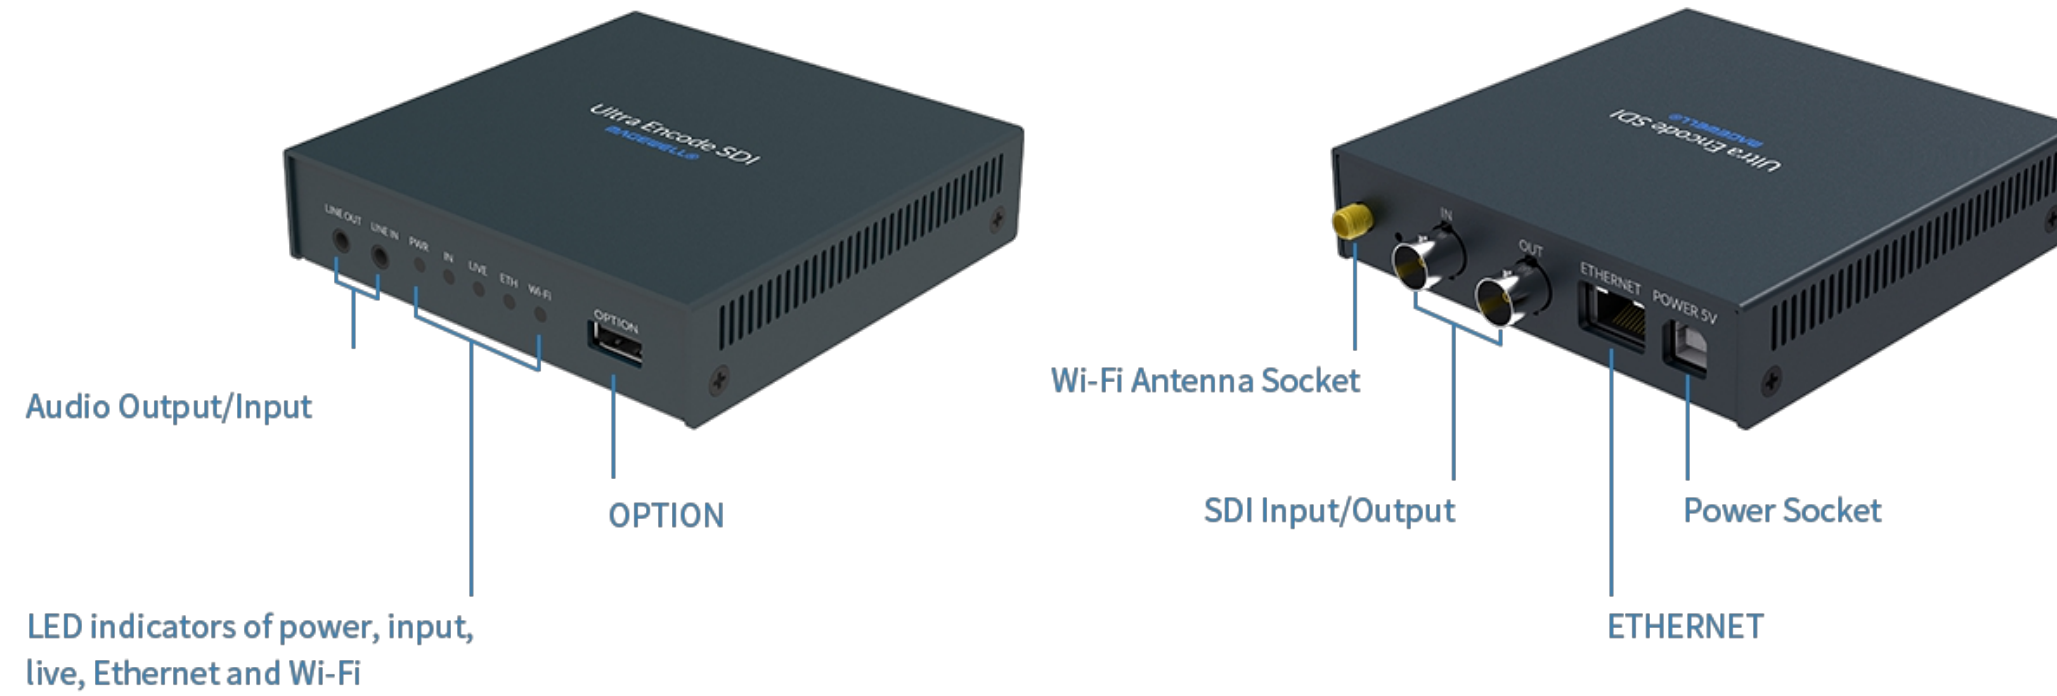


Figure 2 Ultra Encode SDI

⚠ Plug included Wi-Fi antenna when you want to connect to a wireless network.

## Indicators

Indicators status is as follows.

### PWR (Power)

- On: power on.
- Off: power off.

### IN (HDMI/SDI)

- On: input signal detected.
- Off: input signal undetected.

### LIVE

- On: the encoder is streaming to at least one streaming address.
- Breathing: none of the live sessions is enabled.

### ETH

- On: Ethernet connected.
- Off: Ethernet unconnected.

### Wi-Fi



- On: Wi-Fi connected.
- Off: Wi-Fi unconnected.

Multiple indicators flash:

- All but PWR indicator lights flash once simultaneously: system is booting up or rebooting.
- The indicator lights flash in turn from IN to Wi-Fi: firmware is updating.

⚠ If any other status appear, please try to unplug and re-plug in the power cable to recover your encoder.

# Get Started With Ultra Encode

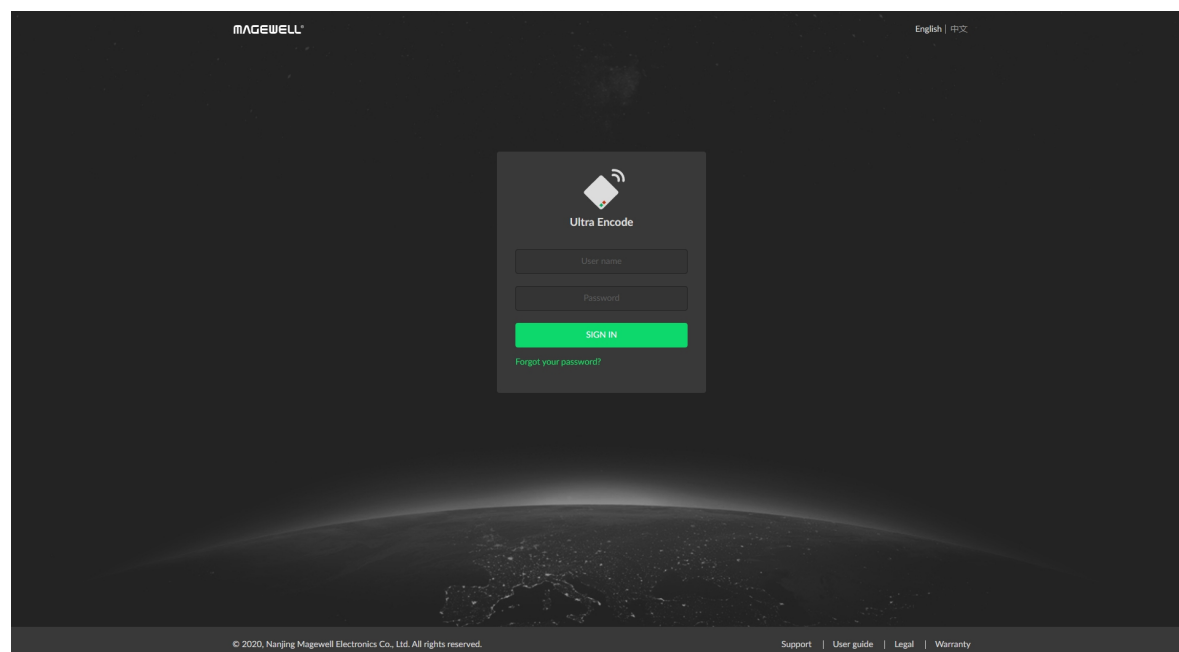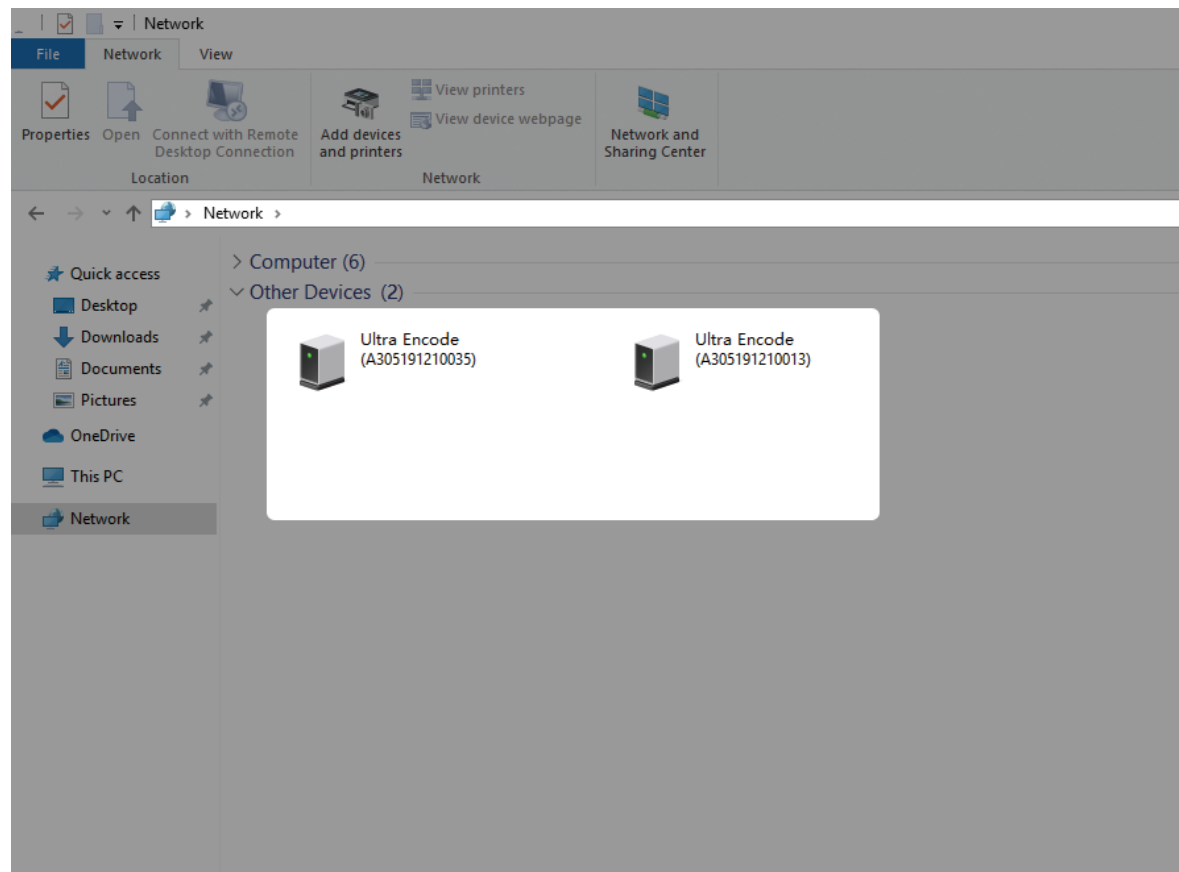

## Access Web UI

Manage your device via wired networks or Wi-Fi.

1. Connect your device to your LAN and power it up.

⚠ To ensure a smooth video, you are recommended to connect to a wired network.

2. Open Web UI:
  - Via File Explorer on Windows 7/8/8.1/10
    - i. Open File Explorer in your PC, then locate your device in **Network > Other Devices**.
    - ii. Double click the device icon, open the sign page of Web GUI.
  - Via device Wi-Fi AP, IP Address: 192.168.48.1

⚠ Plug included Wi-Fi antenna when you want to connect to a wireless network.


- i. In your smartphone/pad/laptop, turn on WLAN, search for and join the device AP named **Ultra Encode + (Serial number)**. The AP names after your gear's **Serial number**, and the password is the last 8-number of the serial number. For example, a serial number A304210101001 indicates the initial AP password is 10101001.

We recommend that the distance between the Web UI and the encoder should be within 10m.

- ii. In your web browser, enter 192.168.48.1 to open the Web UI.
3. Input your username and password.
    - The default administrator name and password are both Admin.
    - We recommend you to modify the admin password after initial logging-in.


## Initialization

Follow the instructions of the Web UI to perform the device initialization and set a new device name.

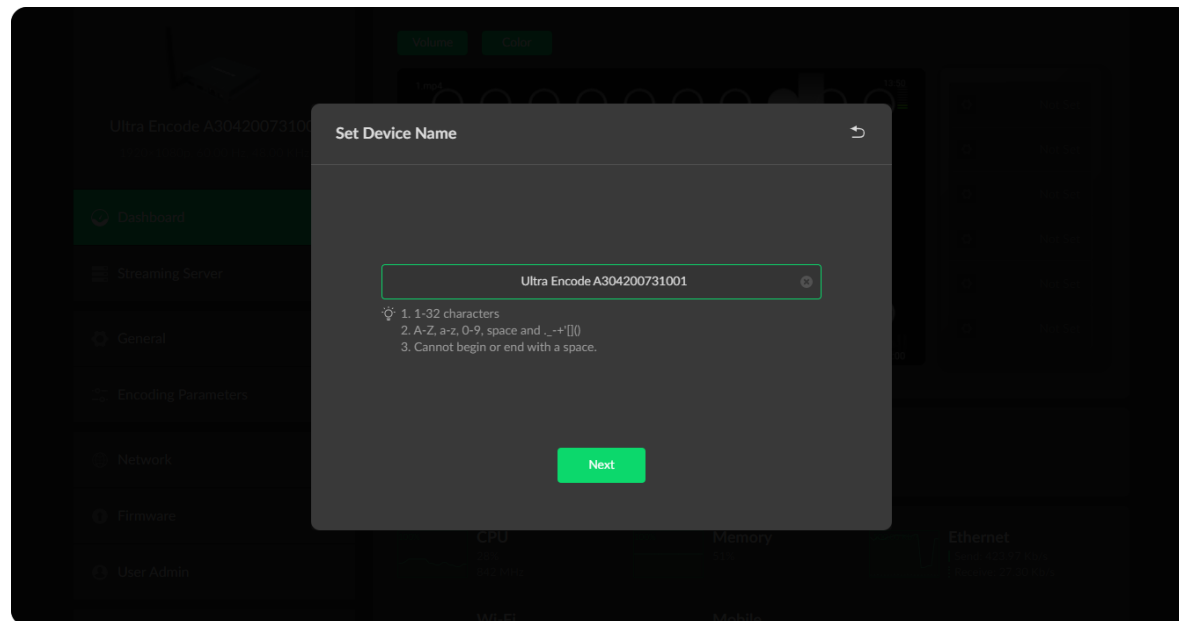



# Web UI Configuration

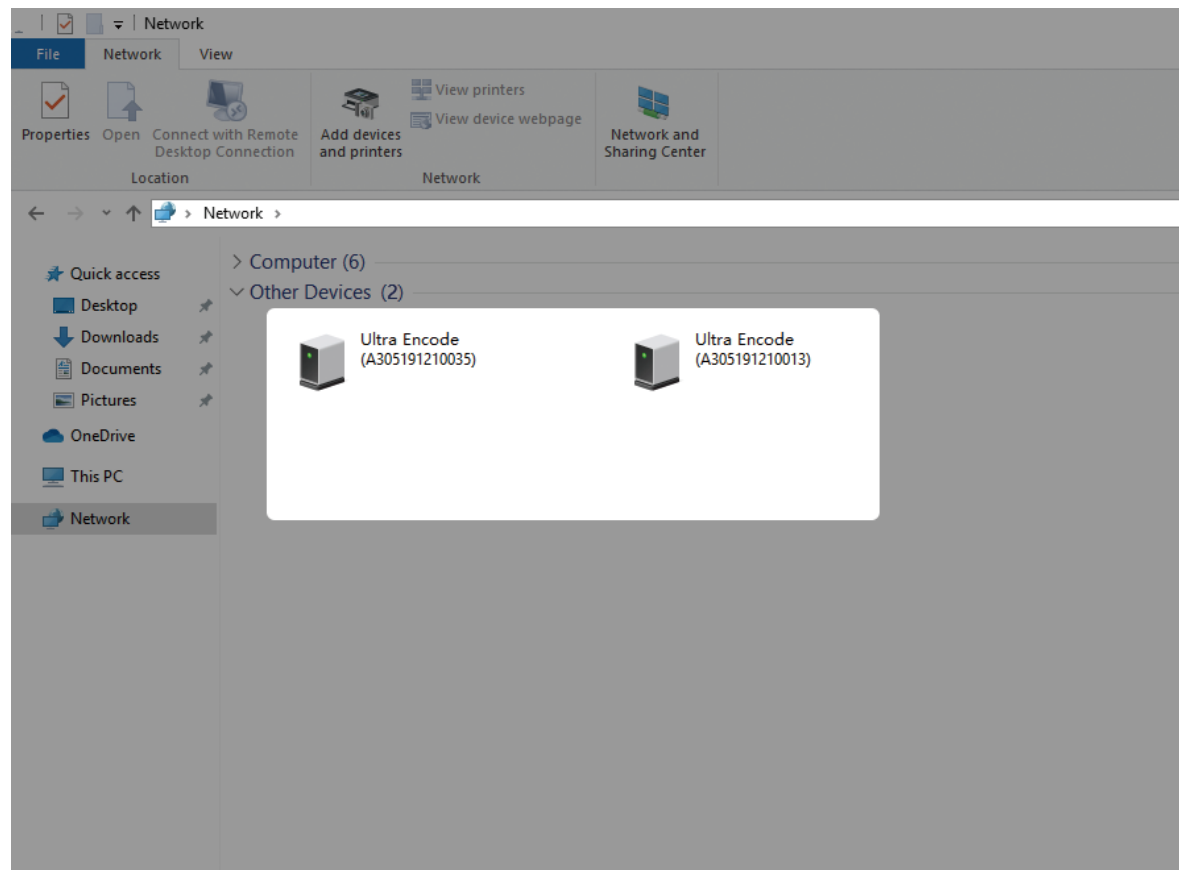

## Access the Web UI

If you know your device's IP address, type it into your web browser to Web UI. Alternatively, you can access the Web UI via wired Ethernet or Wi-Fi.

1. Connect your device to your LAN and power it up.

⚠ To ensure a smooth video, you are recommended to connect to a wired network.

2. Open Web UI:


- Via File Explorer on Windows 7/8/8.1/10
  - i. Open File Explorer in your PC, then locate your device in **Network > Other Devices**.
  - ii. Double click the device icon to open the sign page of Web GUI.
- Via device Wi-Fi AP, IP Address: 192.168.48.1

⚠ Plug included Wi-Fi antenna when you want to connect to a wireless network.

- i. In your smartphone/pad/laptop, turn on WLAN, search for and join the device AP named **Ultra Encode + (Serial number)**.  
The AP names after your gear's **Serial number**, and the password is the last 8-number of the serial number by default. For example, a serial number A304210101001 indicates the initial AP password is 10101001.


We recommend that the distance between the Web UI and the encoder should be within 10m.

- ii. In your web browser, enter 192.168.48.1 to open the Web UI.

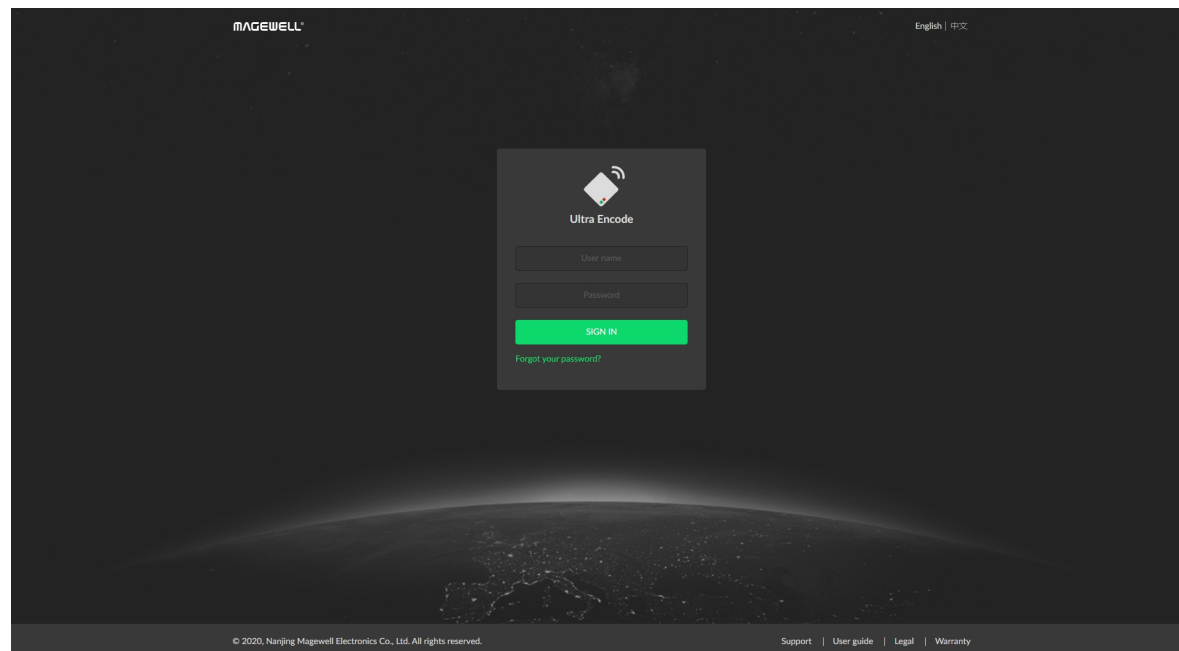

## Sign In/Out


The Web UI allows multiple users to have read/write access to make configuration settings at the same time after logging-in. However, to avoid configuration conflicts, we do not recommend you to operate one device simultaneously.

1. Sign In: enter your account and password in the **SIGN IN** page.
  - The default administrator name and password are both Admin.
  - We recommend you to modify the admin password after initial logging-in.
2. Sign Out: click the drop-list icon  behind the logging-in username at the top-right of the Web UI, and select **Sign out**.



## Dashboard


On **Dashboard** page, you can:

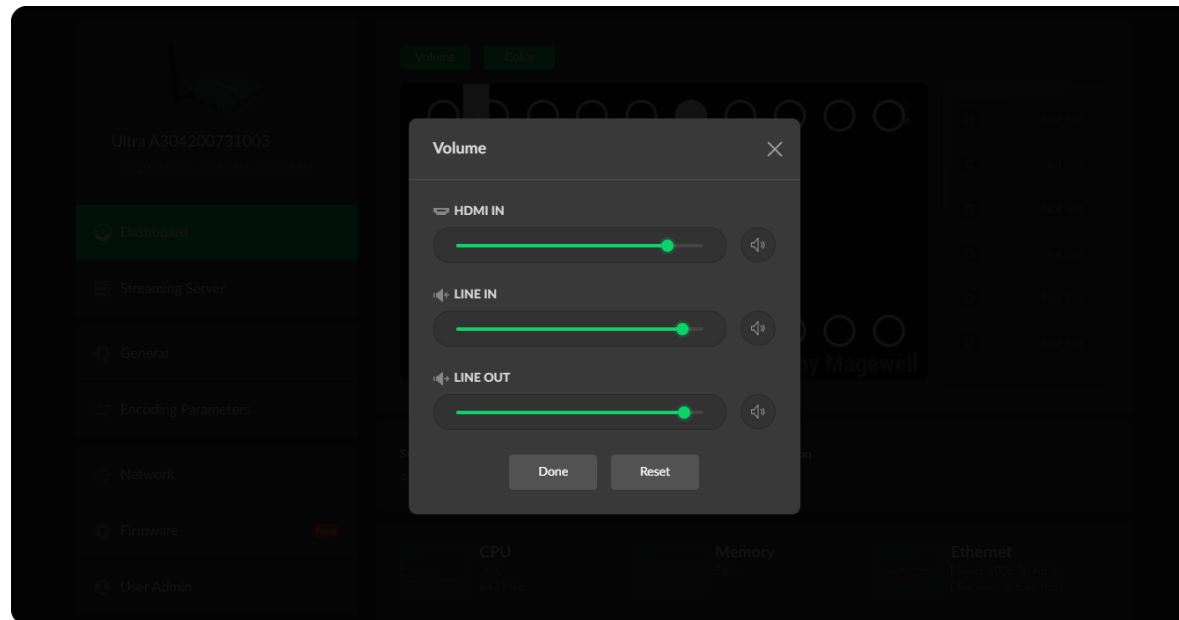- preview the thumbnail of the encoded video
- check device hardware information
- check system performance status
- set global volume and color



## Set Volume


- **HDMI/SDI IN:** adjust input signal volume
- **LINE IN:** adjust the audio connected to the LINE IN
- **LINE OUT:** adjust the LINE OUT audio which remixes audio embedded in input signal and LINE IN
-  : mute current channel
-  : restore current channel to default value
- **Reset:** restore all settings of the volume to default settings
- **Done:** click to save your configuration

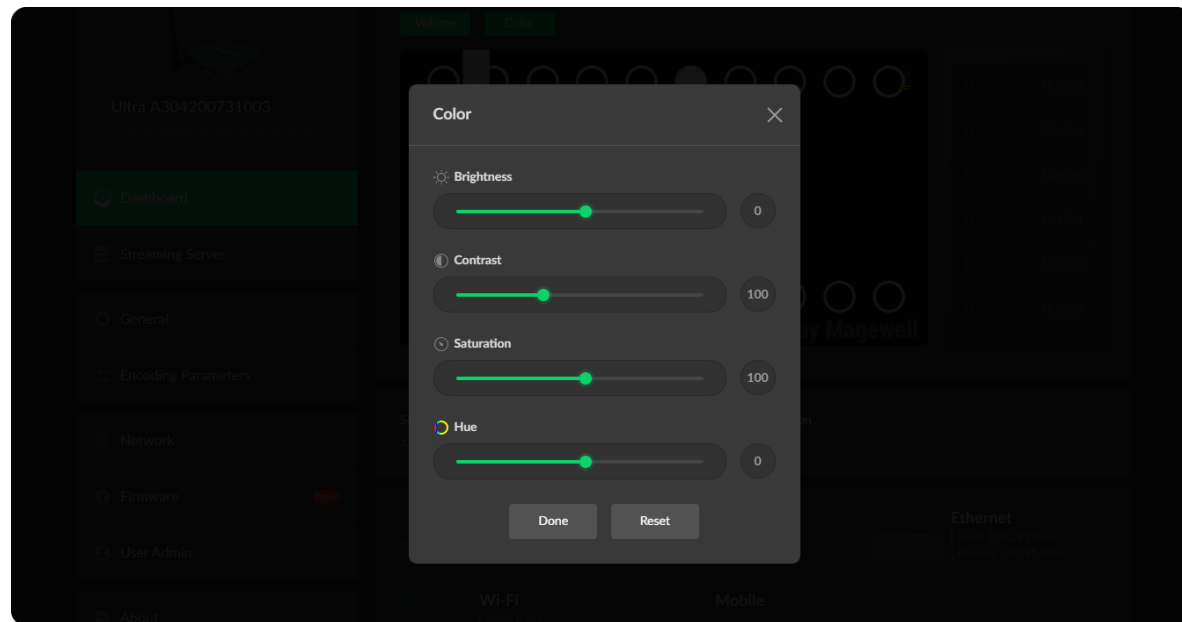

## Set Color


Set color format of preview and stream video.

- **Brightness:** range from -100 to 100, the default value is 0.
- **Contrast:** range from 50 to 200, the default value is 100.
- **Saturation:** range from 0 to 200, the default value is 100.
- **Hue:** range from -90 to 90, the default value is 0.
- **Reset:** restore all settings of the color to default settings
- **Done:** save your configuration

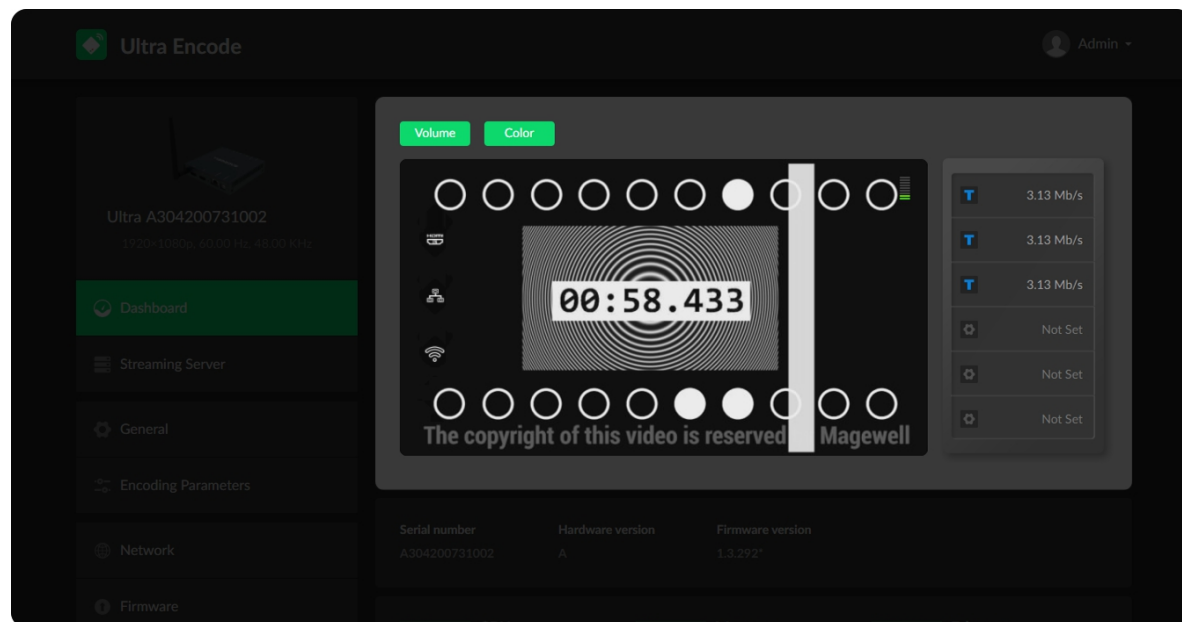

## Preview Thumbnails

Thumbnails give you a quick snapshot of your video as they're browsing on the target video platform.

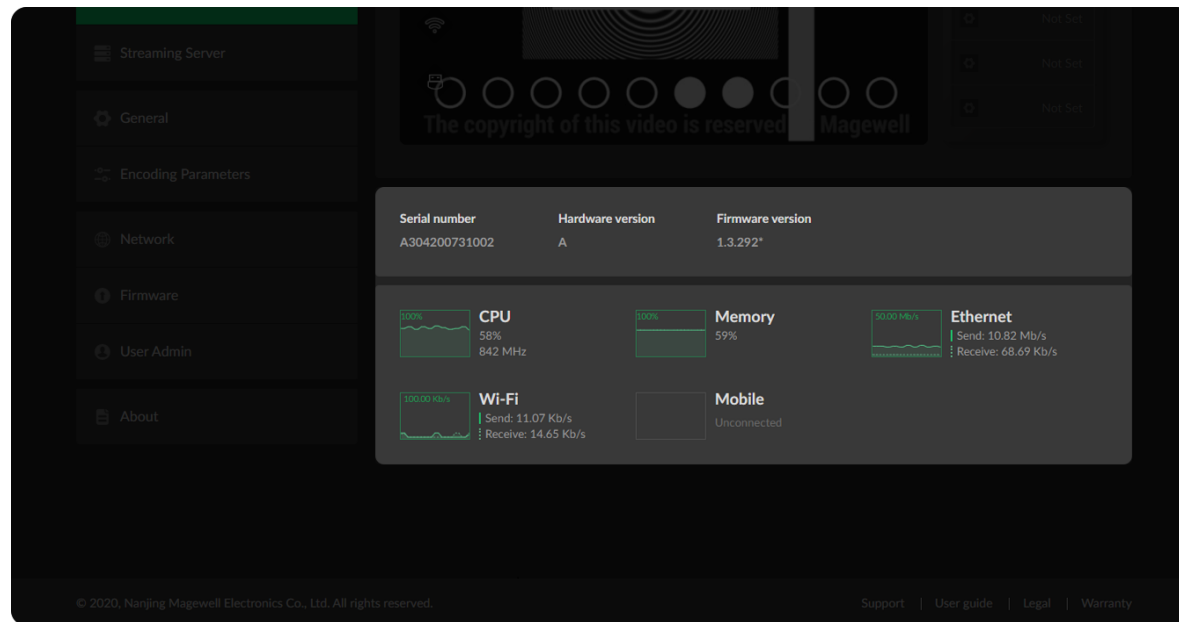

## Check Hardware Information


- **Serial number:** serial number of your unit, which is also marked on your device.
- **Hardware version:** hardware version of your unit.
- **Firmware version:** current firmware version that is installed in your unit. You can update the firmware, via the **System > Firmware** tab.

## Check System Performance

- Gives you an overview of your system CPU, memory usage, network usage in real-time in order to evaluate the device performance & health.

## Streaming Server


The encoder natively supports streaming to YouTube, Facebook, Twitch, as well as self-defined servers.

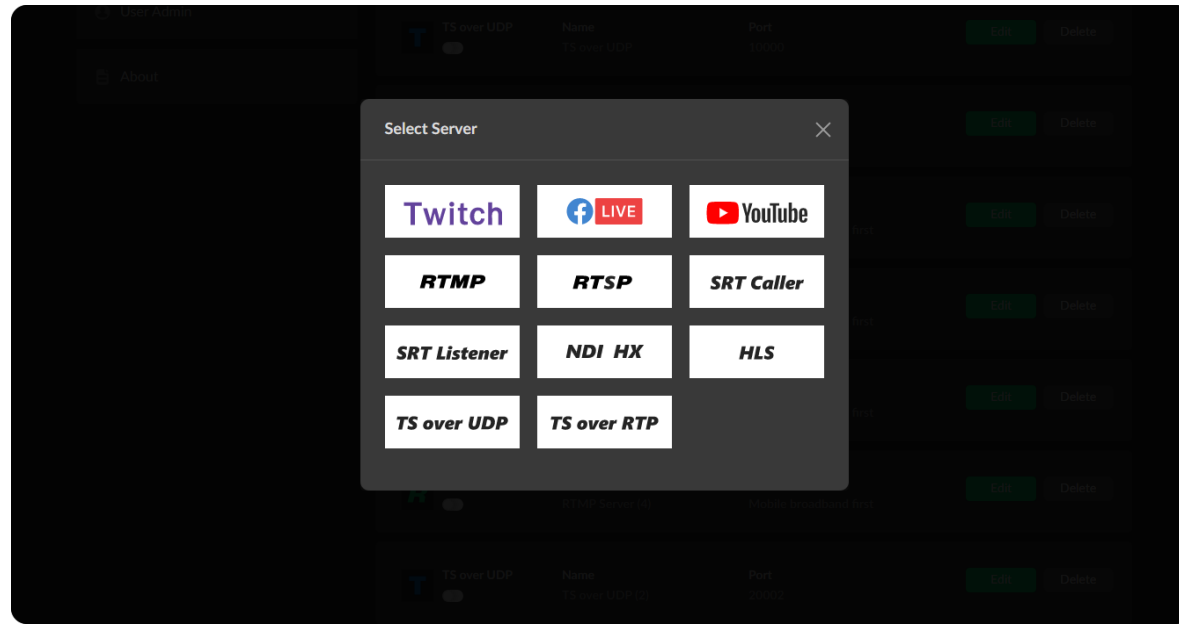

### Manage Streaming Sessions

The encoder will start working automatically once a streaming session is added. That is, the first streaming task successfully added will start automatically; or, if the encode is streaming a TS, SRT or RTMP task, another streaming session, which use the same protocol as is the one streaming, will automatically start once added.

Of course, you can manually added, modify, or delete any of streaming sessions listed in **Streaming Server** tab.


- Click **Edit** to modify the parameters of the stream.
- Click **Delete** to remove the source from the list.
- Turn on/off the switch  to start/stop streaming.
- Click **Add** and select a RTMP, RTMPS, RTSP, SRT Caller/Listener, NDI|HX2, HLS (push), or a TS over UDP/RTP server to stream to.

### Notes

- Supported streaming protocols - RTMP, RTMPS, RTSP, SRT Caller, SRT Listener, NDI|HX2, HLS(push), TS over UDP, TS over RTP.
- Allow simultaneous sessions over the same streaming protocol.
  - Up to 6 sessions of TS over RTP and TS over UDP simultaneously.
  - Up to 6 sessions of SRT Caller and SRT Listener simultaneously, containing one SRT Listener session at most.
  - Up to 6 sessions of RTMP and RTMPS simultaneously. It means that as

long as the destination server allows, RTMP/RTMPS video platforms such as Twitch, Facebook, YouTube can be streamed to at the same time with your accounts.

- Stream only 1 session of HLS (push), RTSP, or NDI HX (NDI|HX2).
- Total bitrates for different network connection types:
  - 24Mbps for all streams is recommended for a wired network connection
  - 16Mbps for all streams is recommended for a wireless network connection
- Select the main stream or sub stream for each session.
- Allow to stream via a different network connection for each session.

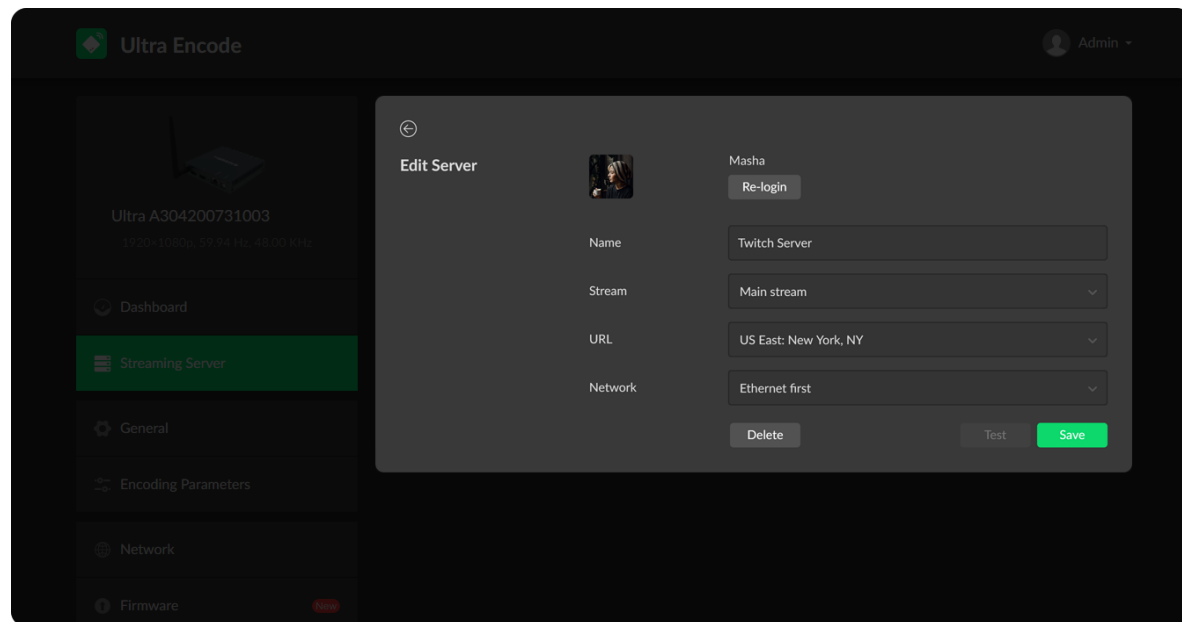


## Live Streaming to Twitch

You can stream to Twitch if you have a Twitch account.

⚠ To ensure smooth live streaming experience, connecting to a wired Ethernet network is recommended.

1. Click **+ Add Server** in the **Streaming Server** tab, select **Twitch**, follow the on-screen instructions to log in and select a server. Your avatar will be displayed after a successful logging-in.
2. Choose the prime network for streaming.  
By default, the network connection priority is: Mobile Broadband > Ethernet > Wi-Fi.  
The device scans for the available network according to the connection priority and connect to it for streaming. If the current network is disconnected, the unit automatically re-scans according to the priority. Plug a USB modem into your encoder while using mobile network to stream.
3. Click **Test** to check the connection between the server and encoder.
4. When prompted, click **OK**.
5. Go back to **Streaming Server** page, turn on  before the added server to start live streaming.



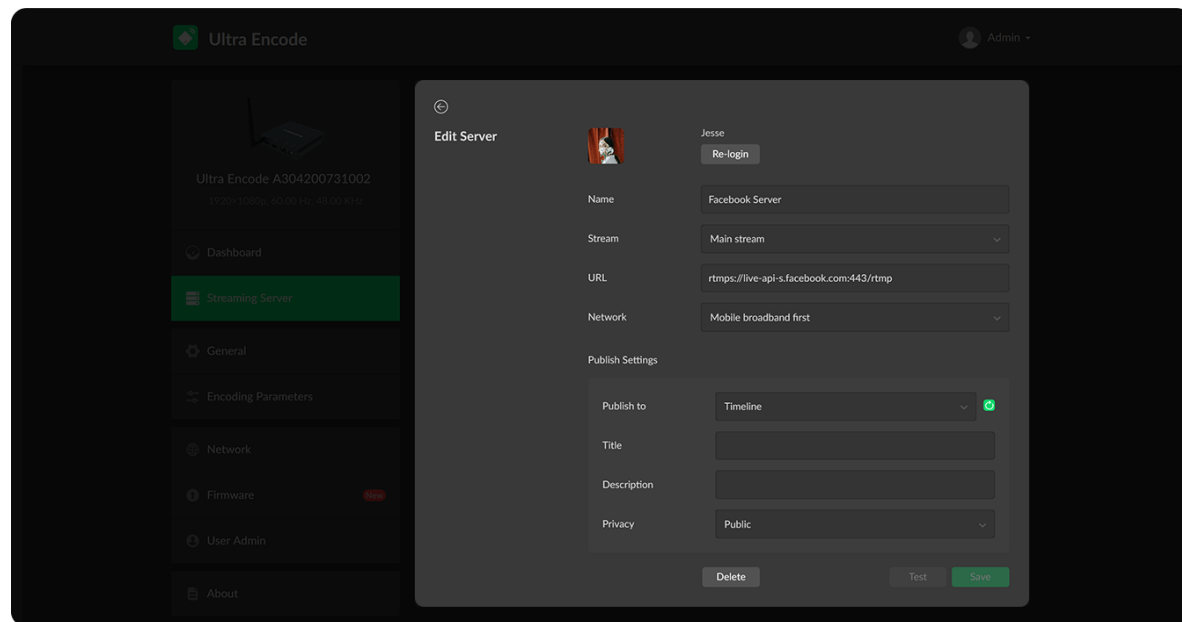



## Live Streaming to Facebook Live


You can live broadcast to Facebook if you have a Facebook account.

⚠ To ensure smooth live streaming experience, connecting to a wired Ethernet network is recommended.

- Stream via the Facebook live interface.
  1. Click **+ Add Server** in the **Streaming Server** tab, select , enter the **Stream Name**.
  2. Click **Log In**. Follow the on-screen instructions to open Facebook, enter the code prompt, and log in.

⚠ Your avatar will be displayed after a successful logging-in.

3. Choose the prime network for streaming.  
By default, the network connection priority is: Mobile Broadband > Ethernet > Wi-Fi.  
The device scans for the available network according to the connection priority and connect to it for streaming. If the current network is disconnected, the unit automatically re-scans according to the priority. Plug a USB modem into your encoder while using mobile network to stream.
4. Click **Test** to check the network connection.
5. After passing the test, click **OK**.
6. Go back to **Streaming Server** page, turn on  before the added server to start live streaming.

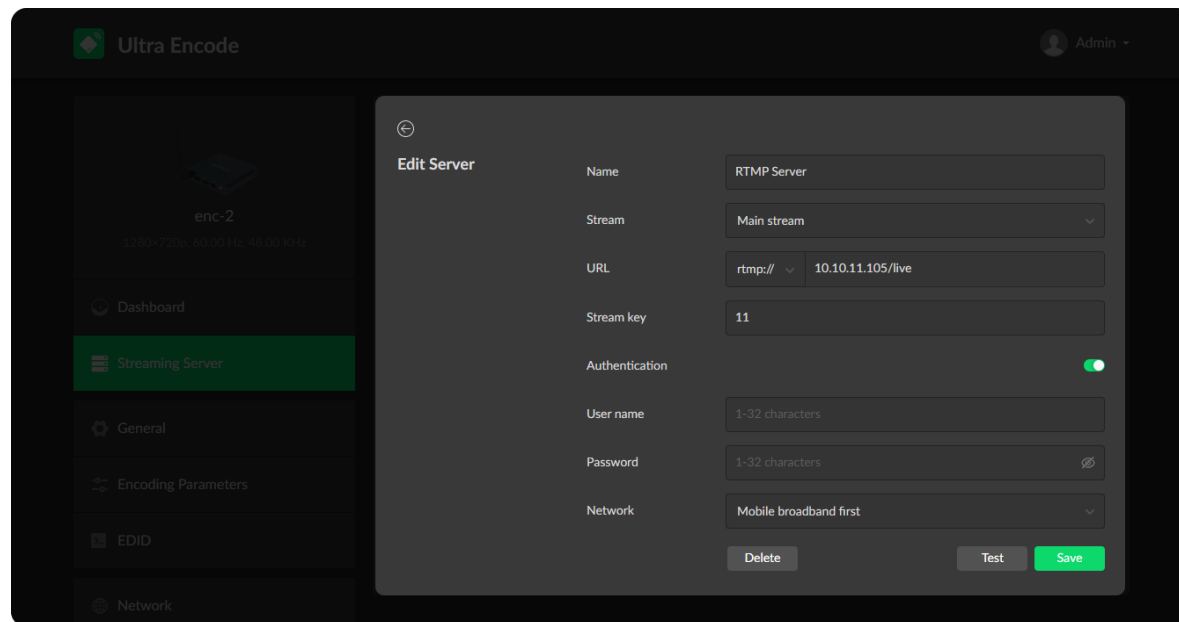

- Stream via an RTMP session.
  1. Click **+ Add Server**, select **RTMP**.
  2. Enter Facebook **URL** and **Stream Key**.
    - To create a live stream on Facebook:
      - i. Go to <https://www.facebook.com/live/create> to create a live stream on Facebook.
      - ii. Click **Create Live Stream**.
      - iii. Choose where you want to post your live broadcast.
      - iv. After inputting the event, or group name, the server URL and stream key or persistent stream key will be displayed on the WebUI.

⚠ Select **Enable persistent stream key** if you want your stream key to be permanent. If this isn't selected, you won't be able to use this stream key again after the streaming session ends.

- v. Write a description, Title and Video Game tag.
- vi. Go live now or schedule your live session.

⚠ Start the video stream from your encoder before going live on Facebook.


3. Choose the prime network for streaming.
 

By default, the network connection priority is: Mobile Broadband > Ethernet > Wi-Fi.

The device scans for the available network according to the connection

priority and connect to it for streaming. If the current network is disconnected, the unit automatically re-scans according to the priority. Plug a USB modem into your encoder when using mobile network to stream.

4. Click **Test** to check the network connection.
5. Go back to the **Streaming Server** page, and turn on  before the added server to start live streaming.

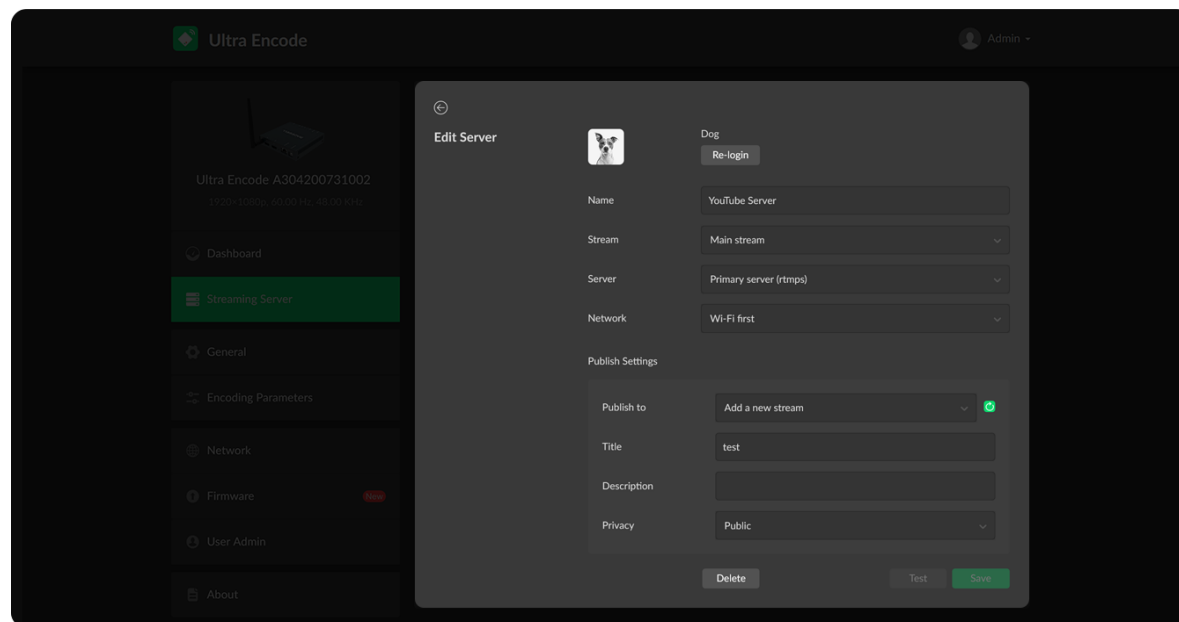


### Live Streaming to YouTube

You can stream to YouTube if you have a YouTube account, and you have enabled the Live streaming feature of your channel at least 24 hours before your streaming.

⚠ To ensure smooth live streaming experience, connecting to a wired Ethernet network is recommended.

⚠ To enable the Live streaming feature, refer to [YouTube Help](#).

1. Click **+ Add Server** in the **Streaming Server** tab, select  **YouTube**, enter the **Stream Name**, follow the on-screen instructions to log in and select a server.
2. Click **Log In**. Follow the on-screen instructions to open YouTube, enter the code displayed on your device, and log in. Your avatar will be displayed after a successful logging-in.
3. Choose the prime network for streaming.


By default, the network connection priority is: Mobile Broadband > Ethernet > Wi-Fi.

The device scans for the available network according to the connection priority and connect to it for streaming. If the current network is disconnected, the unit automatically re-scans according to the priority. Plug a USB modem into your encoder while using mobile network to stream.

4. Tap **Publish to** and select a channel or event for your session. Choose **Add a new stream** and enter title, description and privacy. Then a new live event would be added to your logging-in account automatically. And you can stream to YouTube using streamer without clicking on **go live** in YouTube Studio.


Choose a channel or event. Then **go live** in YouTube studio to ensure a successful live broadcast.

5. Click **Test** to check the connection between the server and encoder.
6. When prompted, click **OK**.
7. (Optional) To add other YouTube accounts, repeat step 3 to 5.
8. (Optional) Choose where you want to post your live broadcast.
9. (Optional) To delete a server: touch the server, slide to the left, and click **Delete**. When prompted, click **Confirm**.

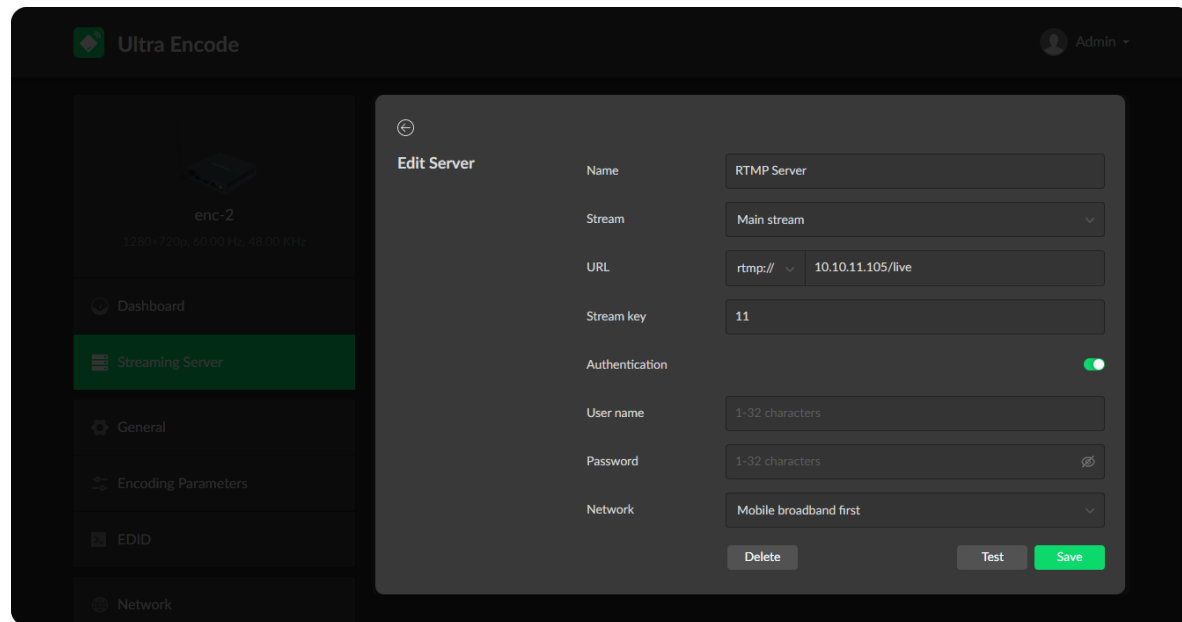

## RTMP/RTMPS


- **Name:** specify a name for current task to facilitate server management, which will be displayed in the server list.
- **Stream:** choose to deliver a main or sub stream, which can be customized in [Encoding Parameters](#) tab.
- **URL:** enter the RTMP URL address, or an RTMP address you have obtained from the live stream platform. Full address example: `rtmp://192.168.1.136:1935/live`. The port number part `:1935` can be omitted, and the value range is 1 to 65535. If the RTMP address is a domain name, `live` can be omitted. If the RTMP address is an IP address, The part `live` cannot be omitted.
- **Stream key:** enter the stream key obtained from the live stream platform. If none, leave it empty.
- **Authentication:** turn on if your live streaming service provider requires. Obtain the User Name and Password from your live streaming service provider.
- **Network:** The device scans for the available network according to the connection priority and connect to it for streaming. If the current network is disconnected, the unit automatically re-scans according to the priority. By default, the network connection priority is: Mobile Broadband > Ethernet > Wi-Fi.  
Plug a USB modem into your encoder while using mobile network to stream.
- **Test:** check the connection between the server and encoder.
- **Save:** save current configuration.

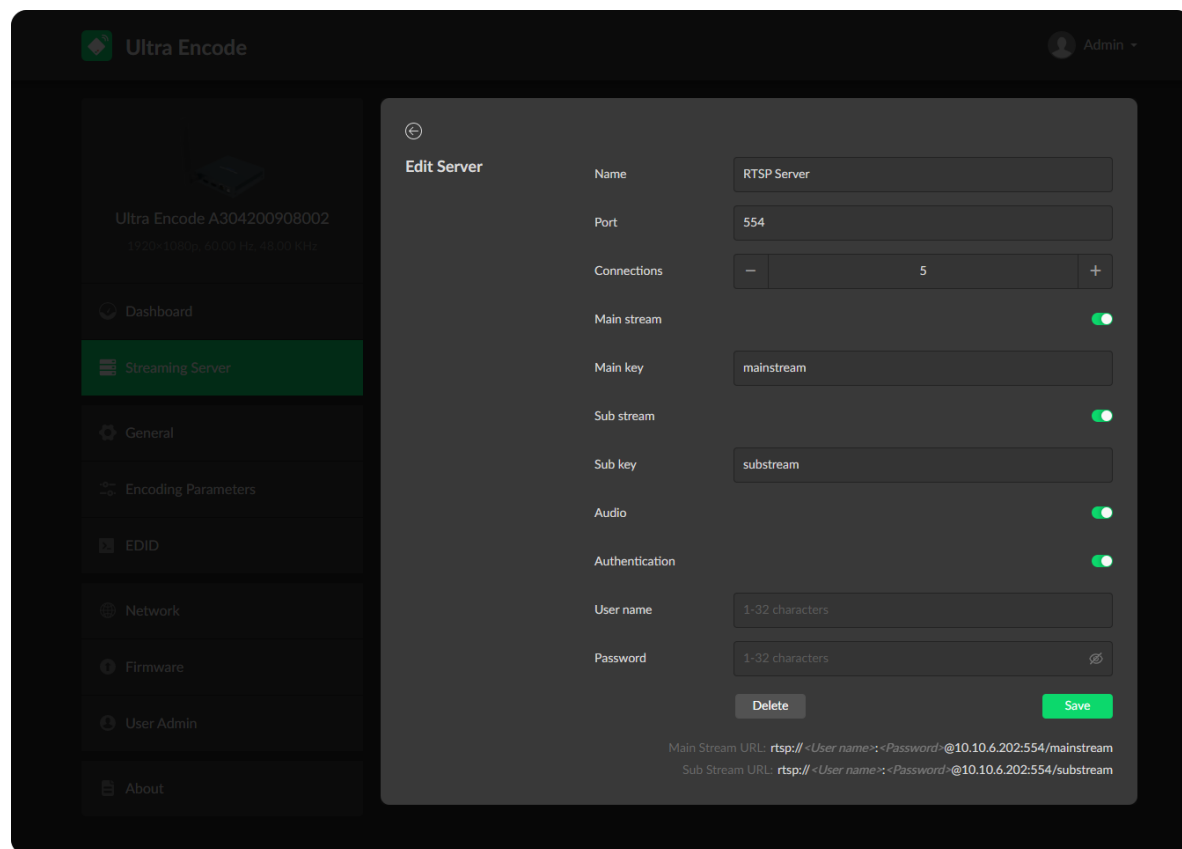

- The encoder can stream up to 6 RTMP/RTMPS servers simultaneously. The recommended total bitrates for the streams is below 24Mbps for a wired network connection, and 16Mbps for a wireless network connection.

## RTSP

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list.
- **Port:** specify RTSP stream port, the default port is 554.
- **Connections:** set number of clients for each RTSP stream, 8 clients are supported at most.
- **Main stream:** turn on to push main stream. Specify parameters in [Encoding Parameters](#) tab.
- **Main key:** specify key for main stream. The main key should be different from sub key.
- **Sub stream:** turn on to push sub stream. Specify parameters in [Encoding Parameters](#) tab.
- **Sub key:** specify key for sub stream. The sub key should be different from main key.
- **Audio:** turn on to stream audio signal, otherwise audio will not be delivered. The audio signal consists of audio embedded in input signal and LINE IN.
- **Authentication:** turn on if your live streaming service provider requires. Type your user name and password for the streaming service.
- **Save:** save current configuration.
- Only 1 RTSP streaming session can be started each time, but you can add

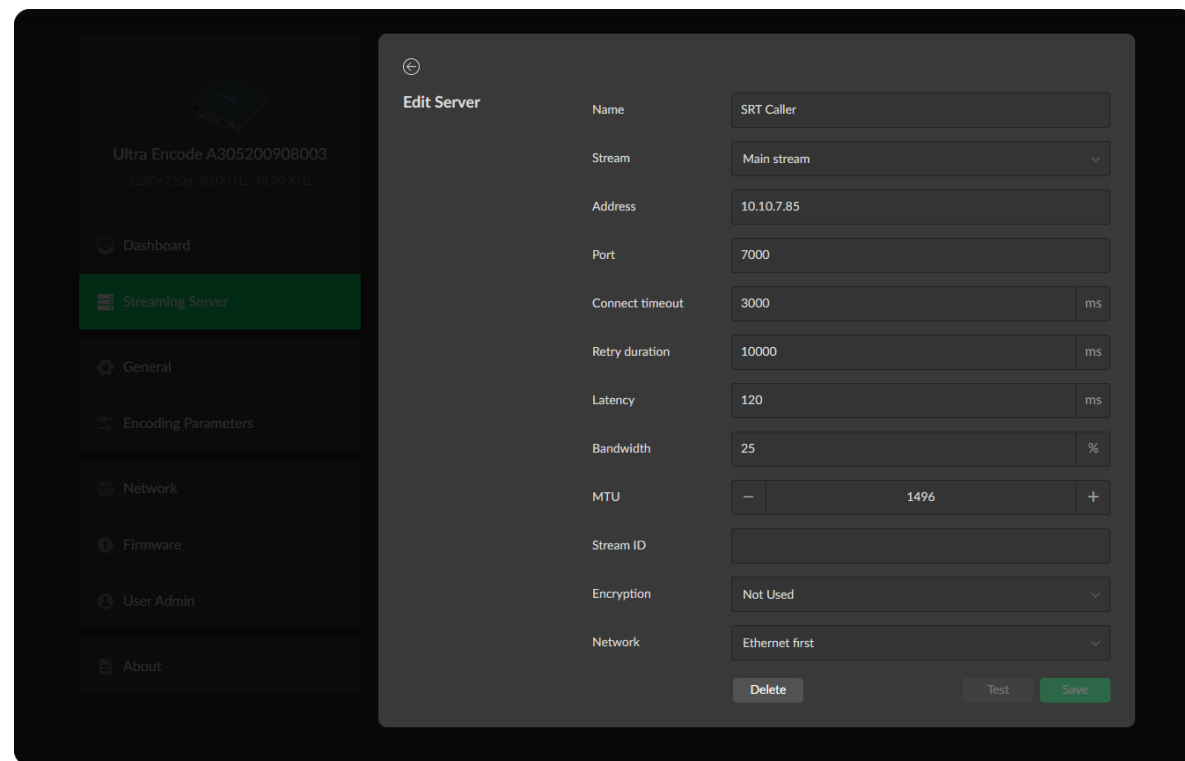


multiple servers to the streaming server list.

- After configuration, the stream URLs display at the end of the page.

### SRT Caller

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list.
- **Stream:** choose to stream main or sub stream, which can be customized in [Encoding Parameters](#) tab.
- **Address:** enter the Listener address when **Mode** is set to **Caller**. If the SRT listener and caller are on the same LAN, enter the private IP address of the SRT listener on the LAN. If the SRT listener and caller are in different network environments, enter the public IP address of the SRT listener.
- **Port:** enter the port number specified by the encoder, which ranges from 1 to 65535.
- **Connect timeout:** specify SRT connection timeout in milliseconds, which ranges from 1000 to 30000ms. The default value is 3000.
- **Retry duration:** specify retry duration when SRT SRT connection timeout in milliseconds, which ranges from 0 to 10000. The default value is 10000.
- **Latency:** possible values are 30, 60, 120, 500, 1000, 5000, 8000ms. The default value is 120. We recommend that you set the same latency for SRT caller and listener.
- **Bandwidth:** indicate the portion of the total bandwidth of a stream required for the exchange of SRT control and recovery packets. Available values are 10%, 25%, 50%, 75%. A worse network condition requires more bandwidth for overhead to ensure normal transmission.

- **MTU:** specify maximum transmission unit (MTU) in bytes, ranging from 232 to 1500. The default size is 1496.
- **Stream ID:** specify Stream ID of 0 to 256 characters which should be consistent with that of its sender.
- **Encryption:** specify the stream encryption algorithm to ensure the data security, options are AES-128/192/256.
- **Passphrase:** specify stream key of 10 to 79 characters, which is the same as the SRT listener.
- **Test:** check the connection between the server and encoder.
- **Save:** save current configuration.
- The encoder can stream up to 6 SRT servers. If the unit streams via wired network, the total code stream is recommended to below 24 Mbps, below 16 Mbps via wireless network.

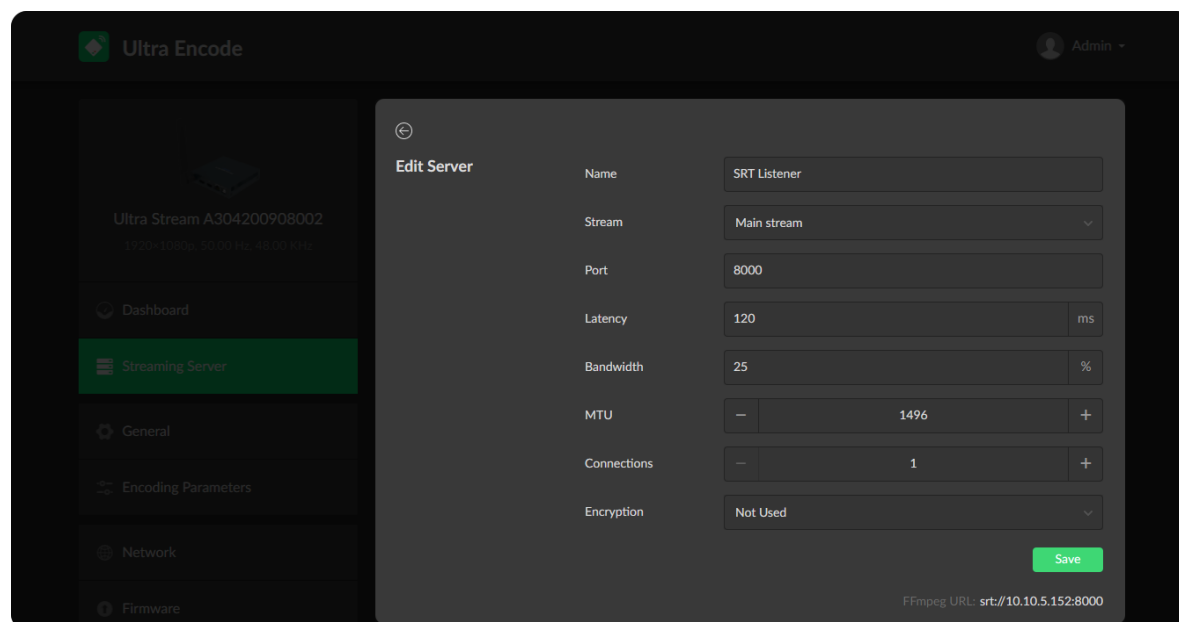


### SRT Listener

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list.
- **Stream:** choose to stream main or sub stream, which can be customized in [Encoding Parameters](#) tab.
- **Port:** specify the service port of the encoder, ranging from 8000, and 10000 to 65535. The default value is 8000.
- **Latency:** options are 30, 60, 120, 500, 1000, 5000, 8000ms and the default value is 120ms. We recommend that you set the same latency for SRT caller and listener.



- **Bandwidth:** indicate the portion of the total bandwidth of a stream required for the exchange of SRT control and recovered packets. Available values are 10%, 25%, 50%, 75%. A worse network condition requires more bandwidth for overhead to ensure normal transmission.
- **MTU:** specify maximum transmission unit (MTU) in bytes, ranging from 232 to 1500. The default size is 1496.
- **Connections:** 8 connections at most.
- **Encryption:** specify encryption algorithm for stream data security. Options are AES-128/192/256.
- **Passphrase:** specify stream key of 10 to 79 characters, which is the same as the SRT caller.
- **Save:** save current configuration.
- The encoder can stream up to 6 SRT sessions simultaneously, containing one SRT Listener session at most. If the unit streams via wired network, the total code stream is recommended to below 24 Mbps, below 16 Mbps via wireless network.
- After configuration, the play URL and passphrase are shown in the page below.

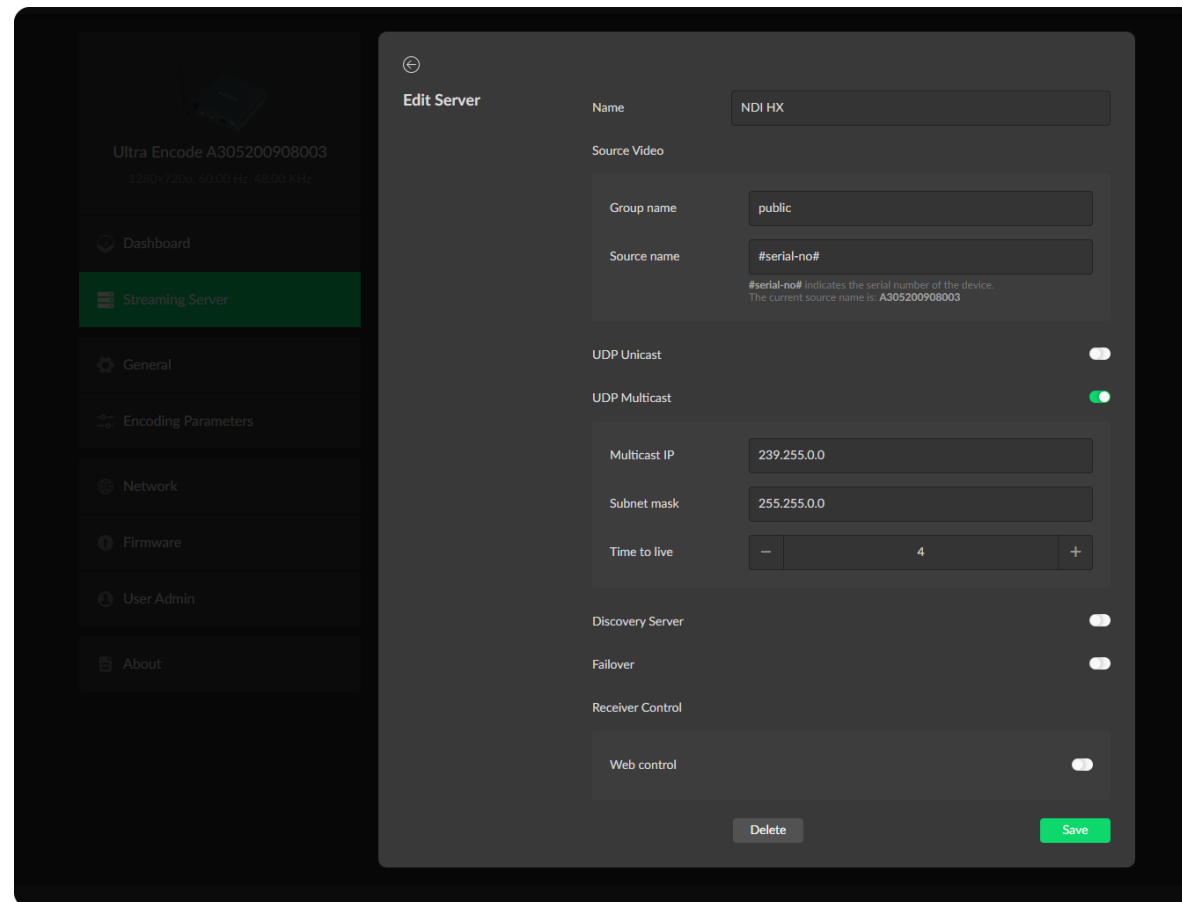


## NDI HX

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list.
- **Source Video**
  - **Group name**  
Specify the **Group name** which the source belongs to. It is case-insensitive, and should be a combination of A to Z, a to z, 0 to 9 and special characters like `_`-. Multiple groups are supported, which should be comma-separated.  
By default, it is public.
  - **Source name**  
By default, it is `#serial-no#`, serial number.
- **UDP Unicast** indicates that the encoder sends a UDP stream directly to the receiver. It is used where lower latency matters. And multiple simultaneous streams will work independently for multiple receivers.
- **UDP Multicast** indicates that the encoder sends the UDP stream to a multicast group. It is used for one-to-many broadcast for lower CPU utilization. Parameters in a multicast configuration include:
  - **Multicast IP** ranges from 224.0.0.0 to 239.255.255.255.
  - **Subnet Mask** can be legitimate value ranging from 255.0.0.0 to 255.255.255.0.
  - **Time To Live** ranges from 1 to 255. The default value is 4.
- **Discovery Server:** turn on the switch to auto-detect a source sender in different network segment and ping the sender. And the **Server IP** should be the IP address of the server running discovery server software. By default,



the switch is off.

- **Failover:** turn on to protect your NDI transmission from failure. If the initial source video fails, the backup device begins to provide a service. The initial source will be automatically switched back to after it recovers. This function is disabled by default.
  - **Source name** shows the backup NDI channel name. Click **Change...** and select the failover (backup) video device within the same NDI group as the initial source.
  - **IP Address** shows the IP Address of the backup NDI channel which is automatically obtained after you select the backup NDI source.
- **Receiver Control:** turn on Web control to enable you to open the Web UI by clicking the gear icon in the NDI Studio Monitor application.
- Only 1 NDI streaming session can be started each time, but you can add multiple servers to the streaming server list.
- When live streaming to NDI server, the encoder would send the main and sub streams simultaneously.
- You can push NDI over sub stream at the following encode profile:
  - Resolutions: 640x480, 640x360
  - Frame rate: 60, 59.94, 50, 30, 29.97, 25, 24, 15, 10, 5fps. To ensure smooth viewing experience, the frame rate above 29.97fps is recommended.
  - Max bitrate: 2 Mbps

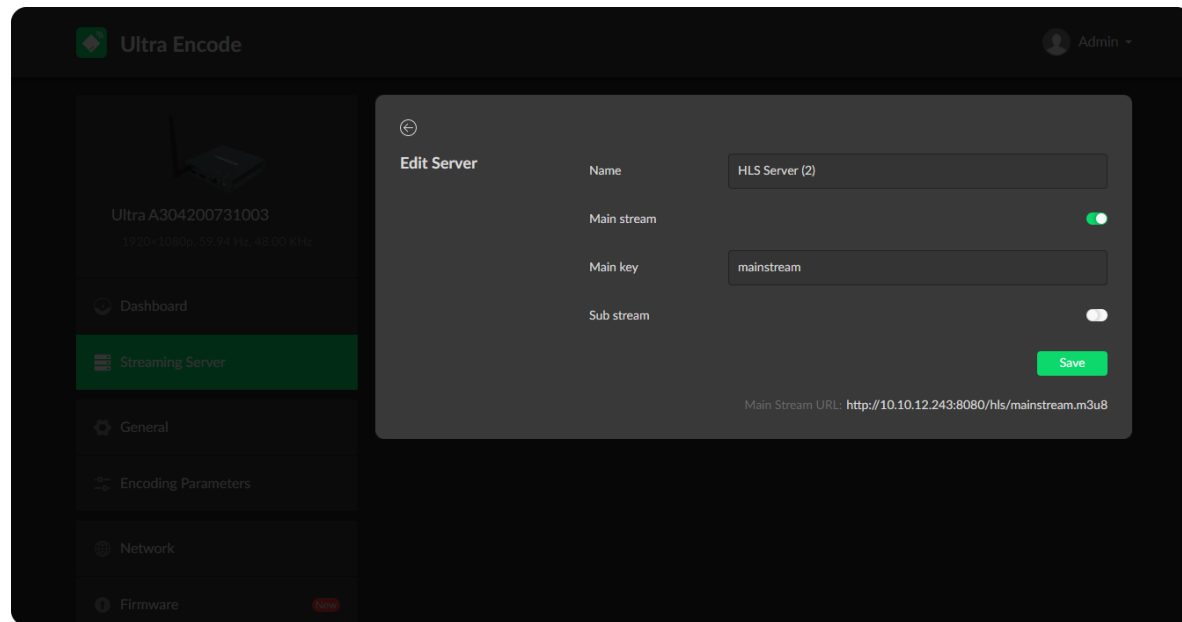


## HLS

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list.
- **Main stream:** switch it on when pushing main stream. Modify the stream profile in [Encoding Parameters](#) tab.
- **Main key:** set key for main stream. The keys of main and sub stream should be different.
- **Sub stream:** switch it on when you want to encode sub stream. Modify the stream profile in [Encoding Parameters](#) tab.
- **Sub key:** set key for sub stream. The sub key should be different from main key.
- **Save:** save current server configuration.
- Only 1 HLS streaming session can be started each time, but you can add multiple servers to the streaming server list.
- After configuration, the stream URLs of main and sub stream will display at the end of the setting page.

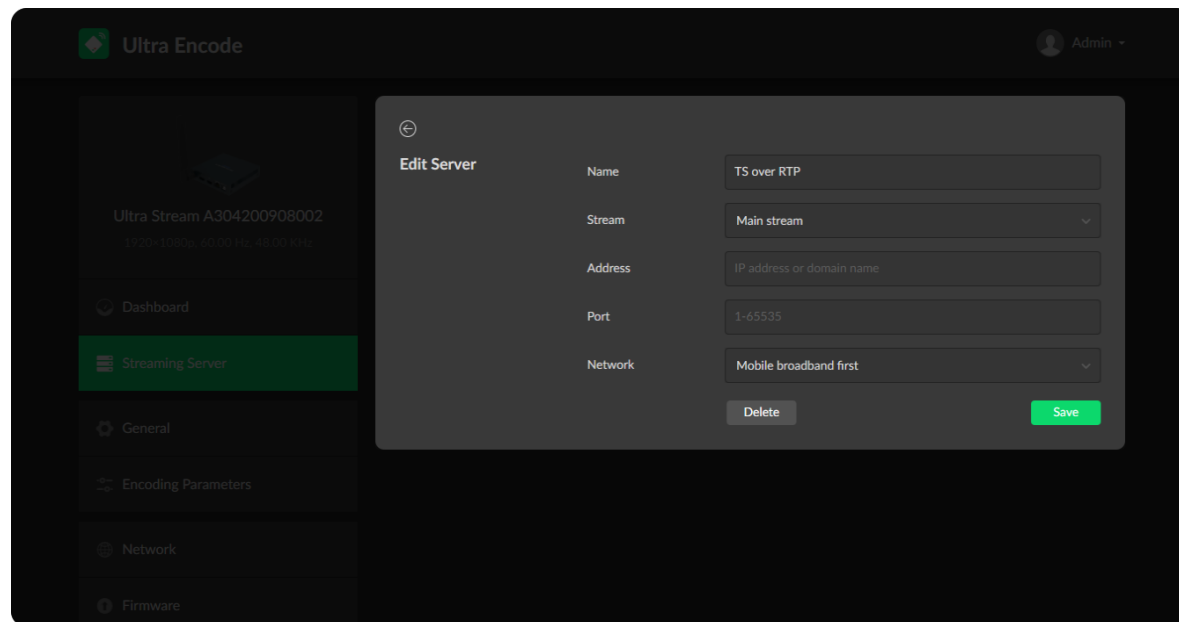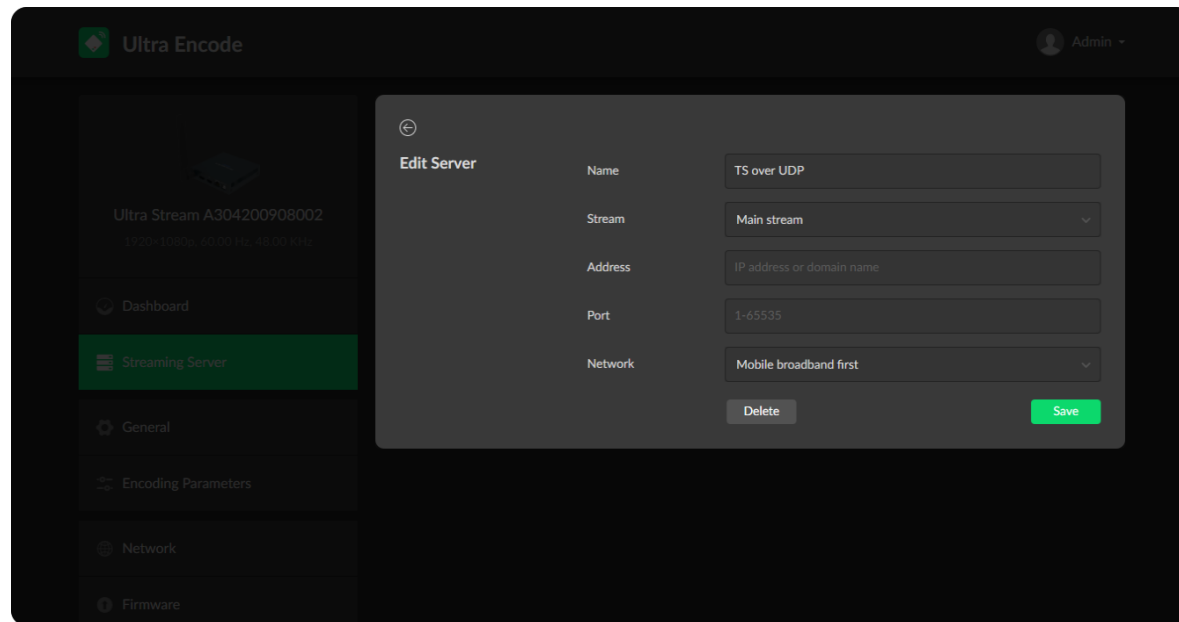

## TS over UDP/RTP

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list.
- **Stream:** choose to stream main or sub stream, which can be customized in [Encoding Parameters](#) tab.
- **Address:** specify the destination address.
- **Port:** specify the stream port. The value ranges from 1 to 65535.
- **Network:** The device scans for the available network according to the connection priority and connect to it for streaming. If the current network is disconnected, the unit automatically re-scans according to the priority. By default, the network connection priority is: Mobile Broadband > Ethernet > Wi-Fi.  
Plug a USB modem into your encoder while using mobile network to stream.
- **Save:** save current configuration.
- The encoder can stream up to 6 TS sessions simultaneously. The recommended total bitrates for the streams is below 24Mbps for a wired network connection, and 16Mbps for a wireless network connection.

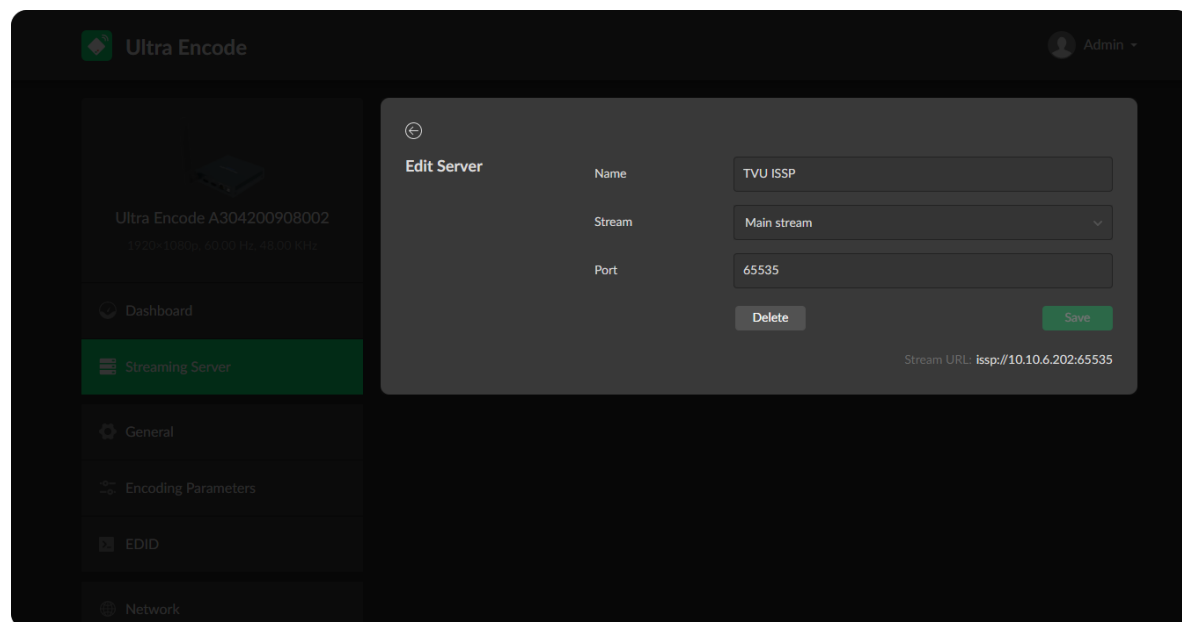


## TVU ISSP


To stream a TVU ISSP session, you need to update your device with firmware of TVU ISSP version first. Go to [Magewell > Support > Downloads > Ultra Encode](#) to get the TVU ISSP version file. However, after updating with TVU ISSP version firmware, you can not stream to other servers.

- **Name:** specify a name for current task to facilitate server management, which will be displayed in server list. The value can be 1 to 30 characters, including A-Z, a-z, 0-9, spaces, .\_-+'[]() and can not begin or end with a space.
- **Stream:** choose to stream main or sub stream, which can be customized in [Encoding Parameters](#) tab.
- **Port:** specify the stream port. The value can be 6539, 10000-65535.
- **Save:** save current configuration.
- The encoder can add up to 16 TVU ISSP sessions and stream 1 session.
- After configuration, the stream URLs display at the end of the page.


## General

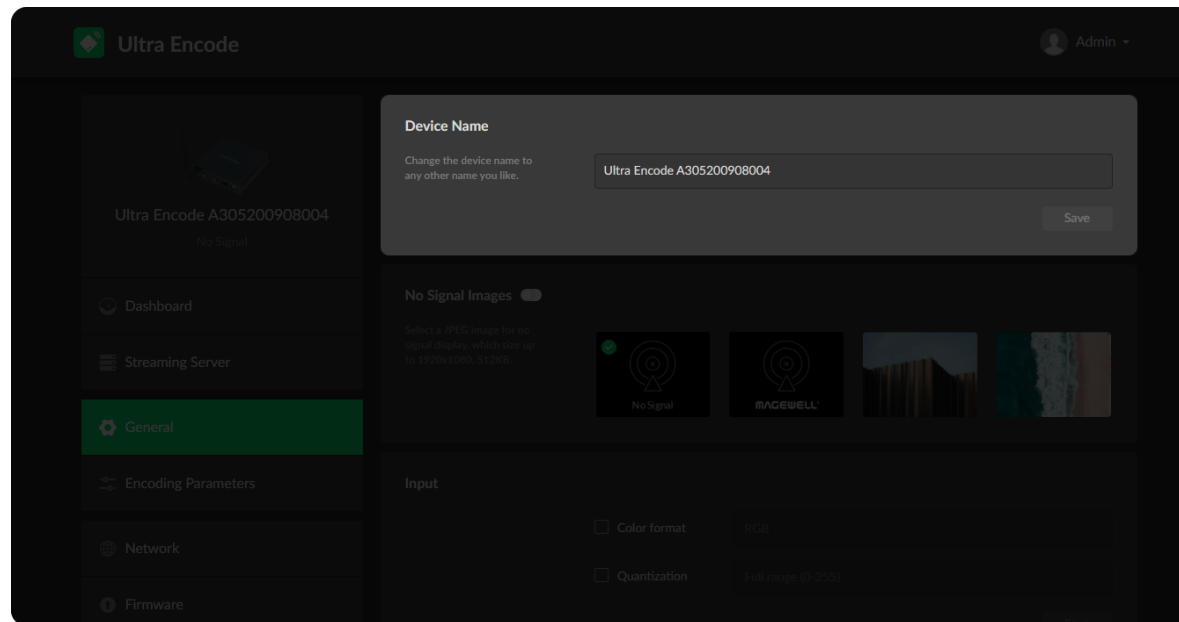

- **Device Name:** range from 1 to 32 characters, including A-Z, a-z, 0-9, space, `._- + ' [ ] ( )` and cannot begin or end with a space.

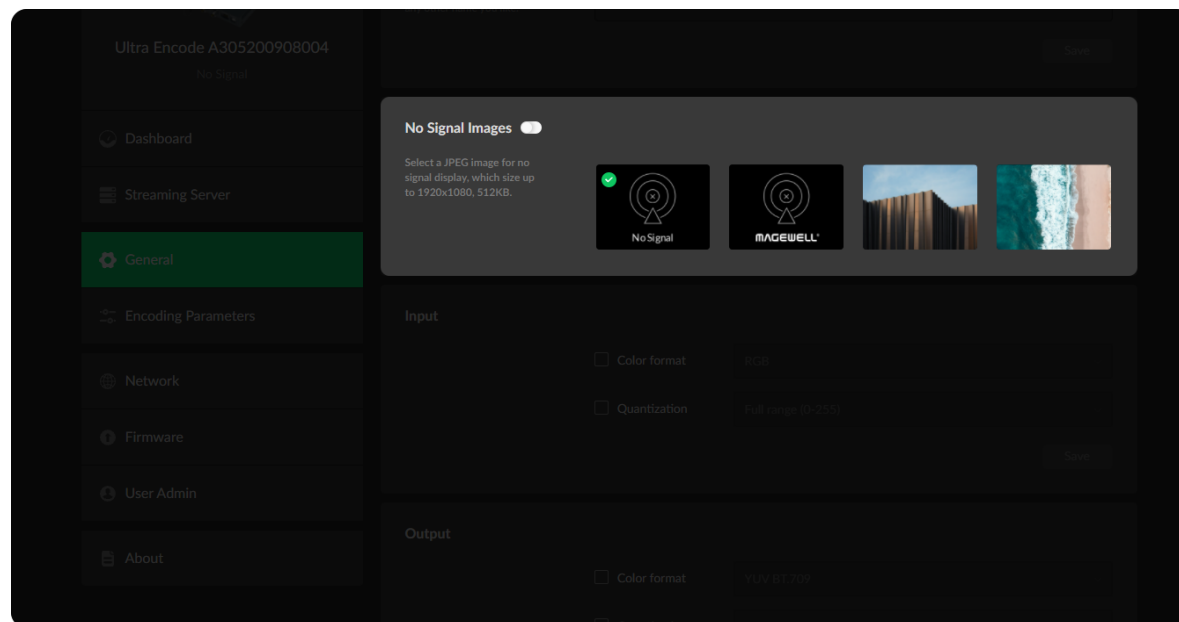


- No Signal Images:** Select a JPEG image for no signal display, which size up to 1920x1080, 512KB. You can upload 2 more JPEG photos. The device provided 2 pictures can not be deleted. By default, the switch is on.

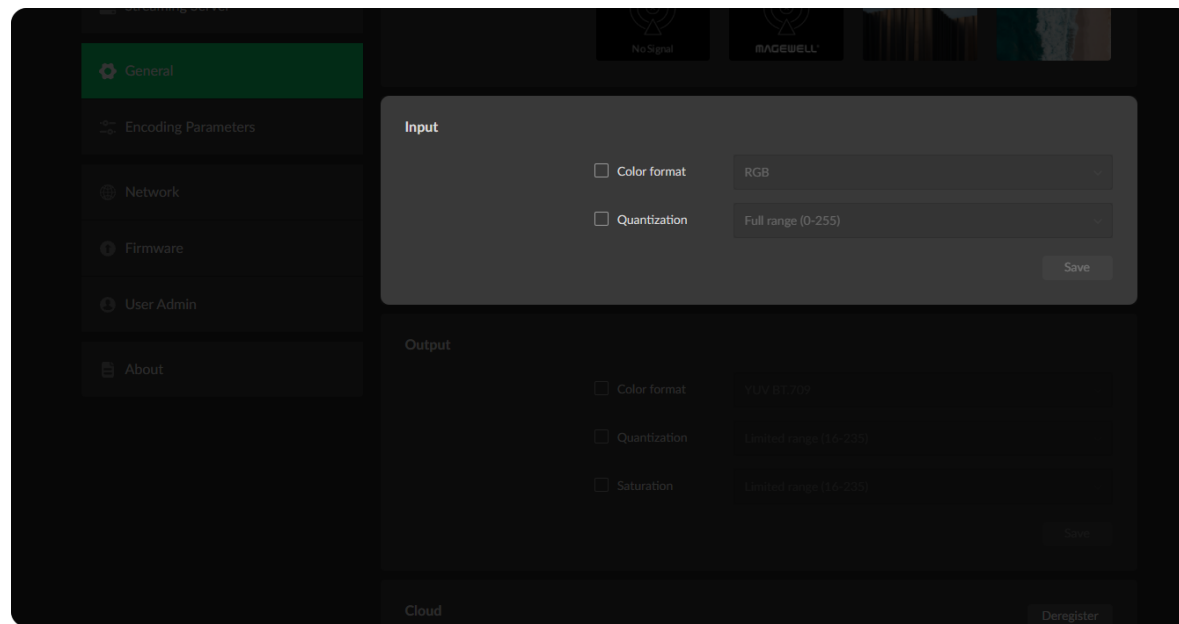

### Set Input


- **Color format:** input video color format. Check the box to select other options, including RGB, YUV BT.601, YUV BT.709, YUV BT.2020.
- **Quantization:** input quantization range. Check the box to select other options, including Full range(0-255), Limited range(16-235).

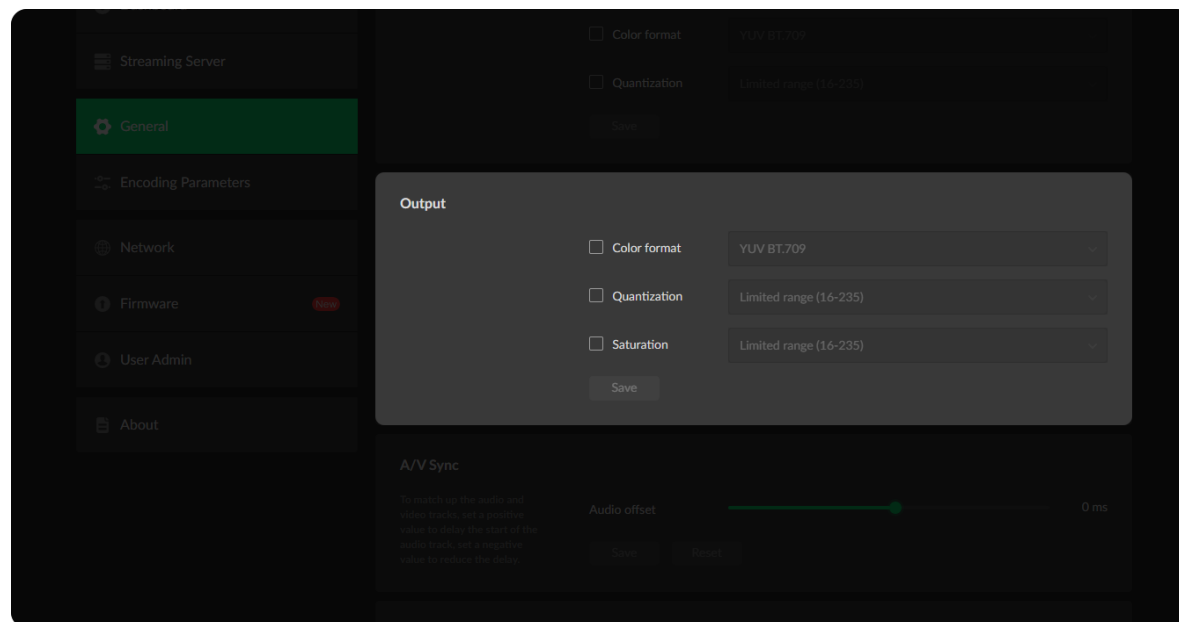

### Set Output

- **Color format:** check the box to select other options, including YUV BT.601, YUV BT.709.
- **Quantization:** check the box to select other options, including Full range(0-255), Limited range(16-235).
- **Saturation:** check the box to select other options, including Full range(0-255), Limited range(16-235), Extended GAMUT range(1-254).



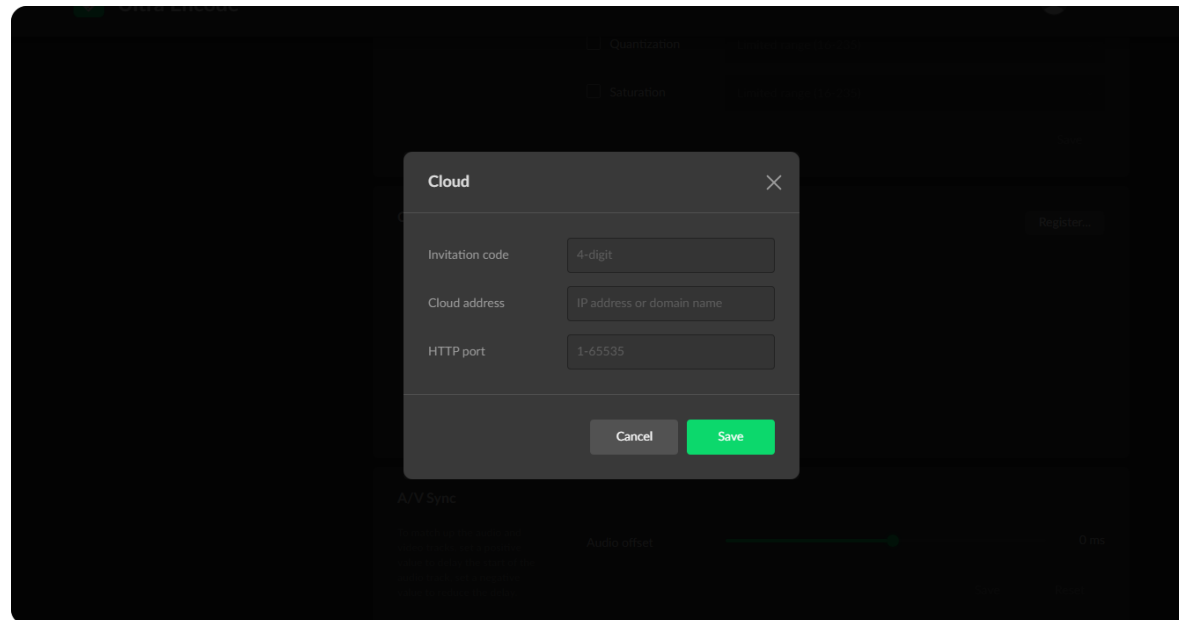


## Cloud

You can apply for remotely control using Magewell Cloud.


⚠ You may not find the Cloud function at the devices with firmware of TVU ISSP version.  
To get a non TVU ISSP firmware, you can go to [Magewell > Support > Downloads > Ultra Encode](#).

- Click **Register...**: and input parameters in the prompted window. And save after configuration.
  - **Invitation code**: a 4-digital numbers security code obtained from Magewell Cloud. If not leave it empty.
  - **Cloud address**: input IP address or domain name of Cloud.
  - **HTTP port**: input HTTP port number, which should be consist with that of Cloud.
  
- Check parameters related to Cloud management.
  - **Cloud status**: **Online** or **Offline**. Online indicates that the communication between device and Cloud platform goes well. On the other hand, Offline indicates the communication is interrupted.
  - **Register status**: shows current status of cloud-join permission, including
    - Incorrect invitation code: you need to change your registration with correct code.
    - Waiting: registration is successfully submitted to Cloud platform.
    - Approved: registration is approved. This device can be remotely

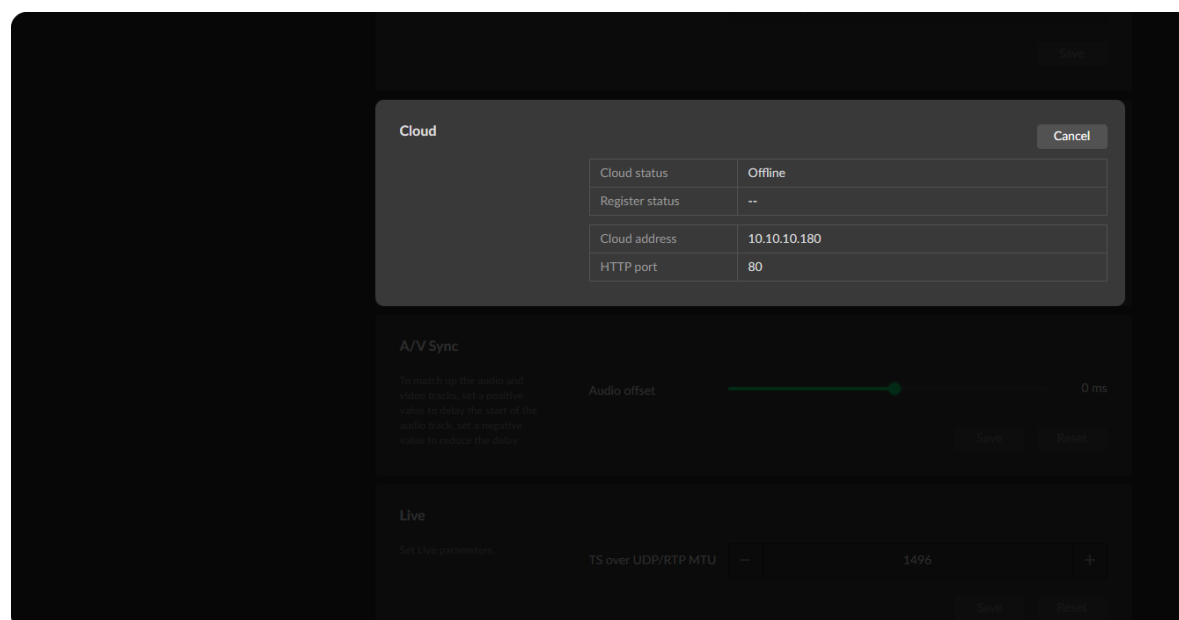

controlled.

- Rejected: Registration is denied.
- Deleted: Registration is deleted, you can re-apply for joining the Cloud.
- **Cloud address:** shows the IP address of Cloud.
- **HTTP port:** shows the HTTP port of device used to communicate with Cloud.

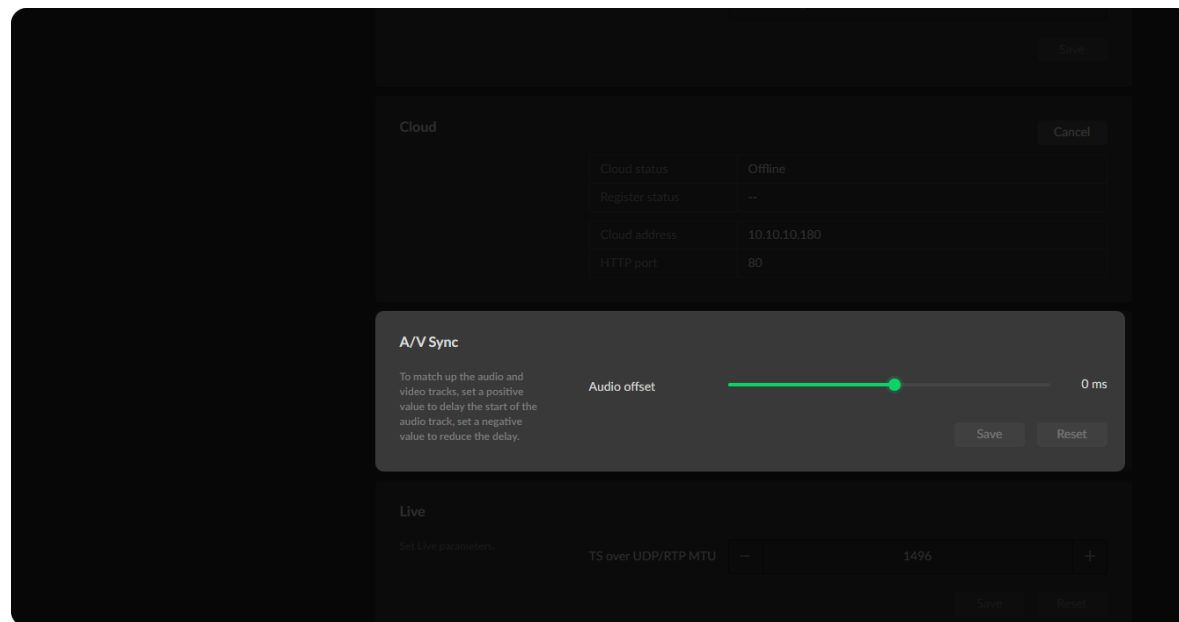


### A/V Sync

- **Audio offset** ranges from -200 to 200ms.


To match up the audio and video tracks, set a positive value to delay the start of the audio track, or set a negative value to reduce the delay.

We recommend that you start your live after this configuration to enjoy the A/V sync adjustment.

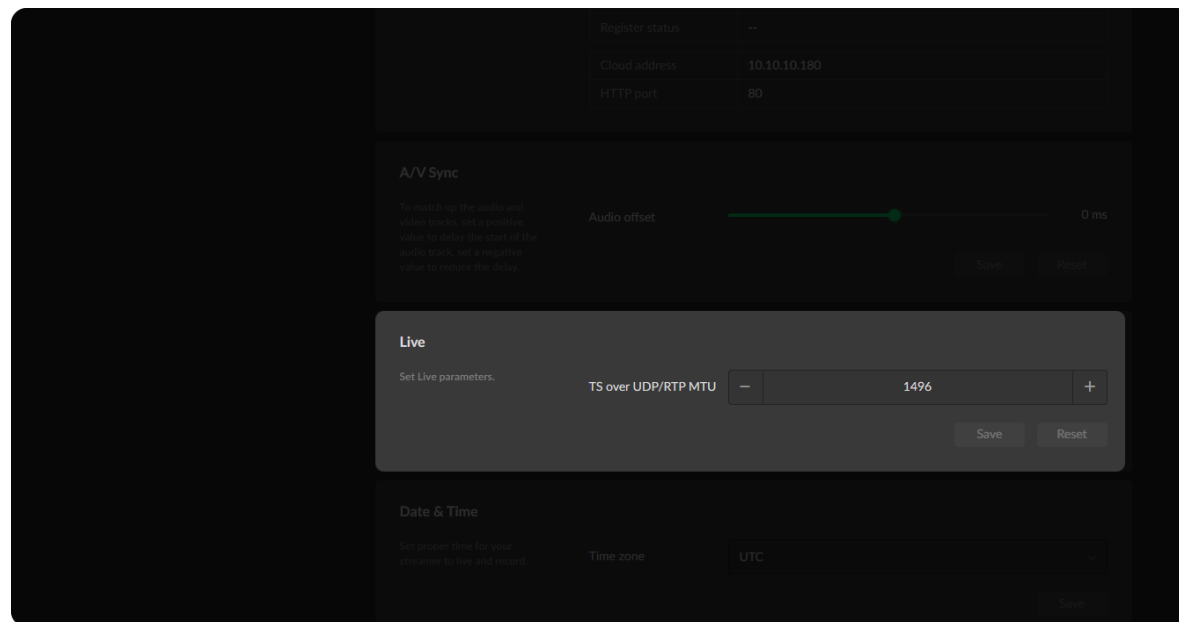


## Live

- **TS over UDP/RTP MTU:** specify maximum transmission unit (MTU) in bytes, ranging from 228 to 1500. The default size is 1496.

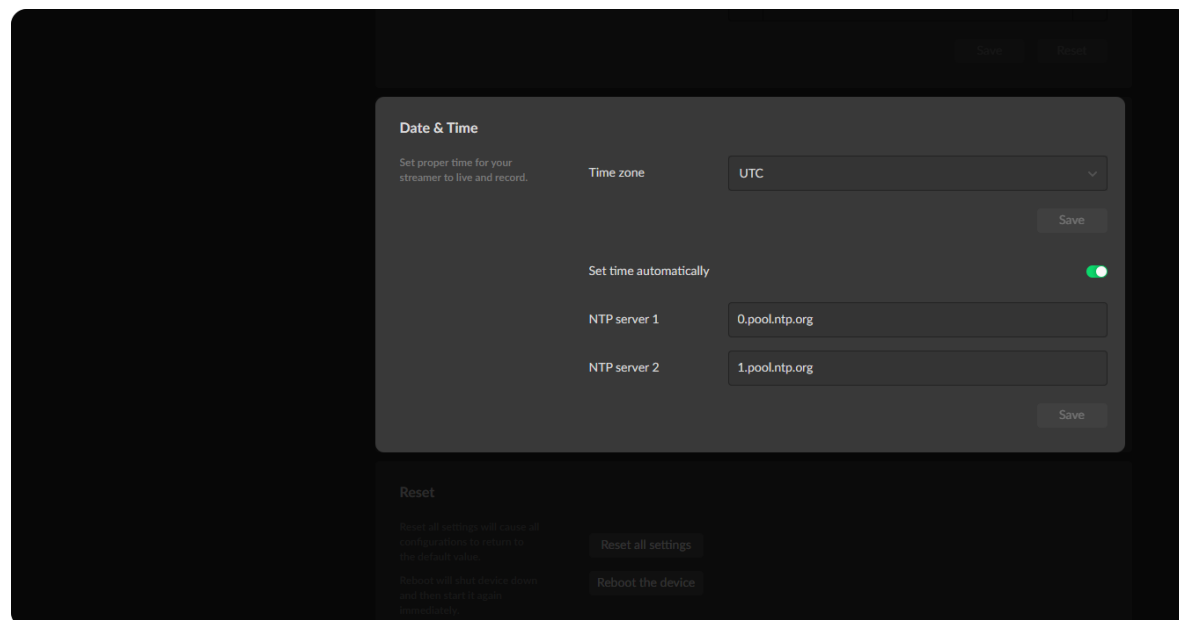

## Date & Time


- **Time zone:** specify a time zone for your device.
- **Set time automatically:** turn on **Set Time Automatically**. Then the device's time will be synchronized to the world-time servers depending on the timezone you set. Otherwise, you can set time manually.
- **NTP server 1:** the default server is 0.pool.ntp.org.
- **NTP server 2:** the default server is 1.pool.ntp.org.

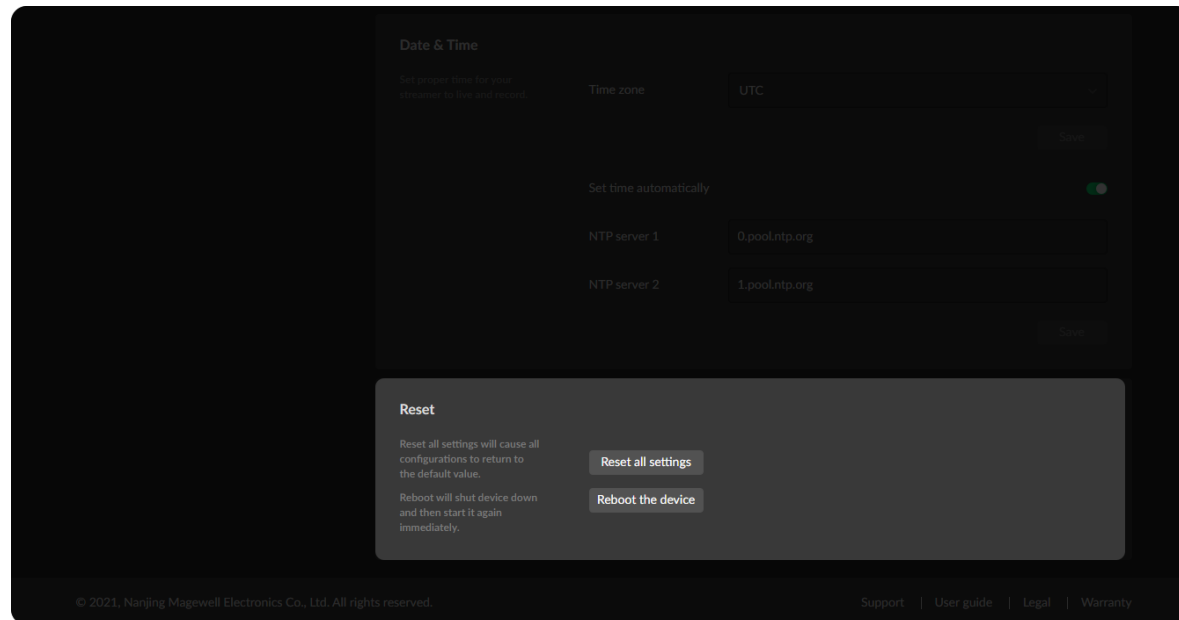

## Reset Your Device

- **Reset all settings:** be cautious that resetting your device would restore configurations to defaults.
- **Reboot the device:** power off the device and restart it when it does not work.


## Encoding Parameters

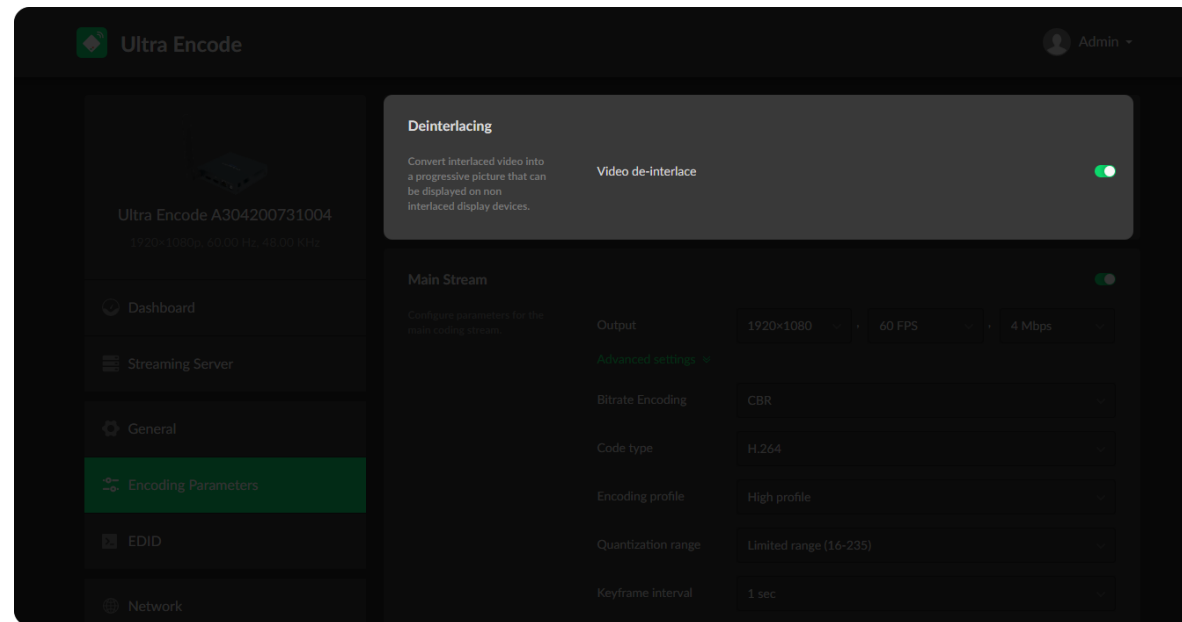

### Deinterlacing

For interlaced signals, if de-interlace function is turned off, and the main and sub coding streams are coded using HEVC, the output can be interlaced HEVC stream.

- **Video de-interlace:** by default, the switch is on. The main and sub streams must be HEVC(H.265) for turning off de-interlace. After turning off, only HEVC is available for the code type of main and sub streams.

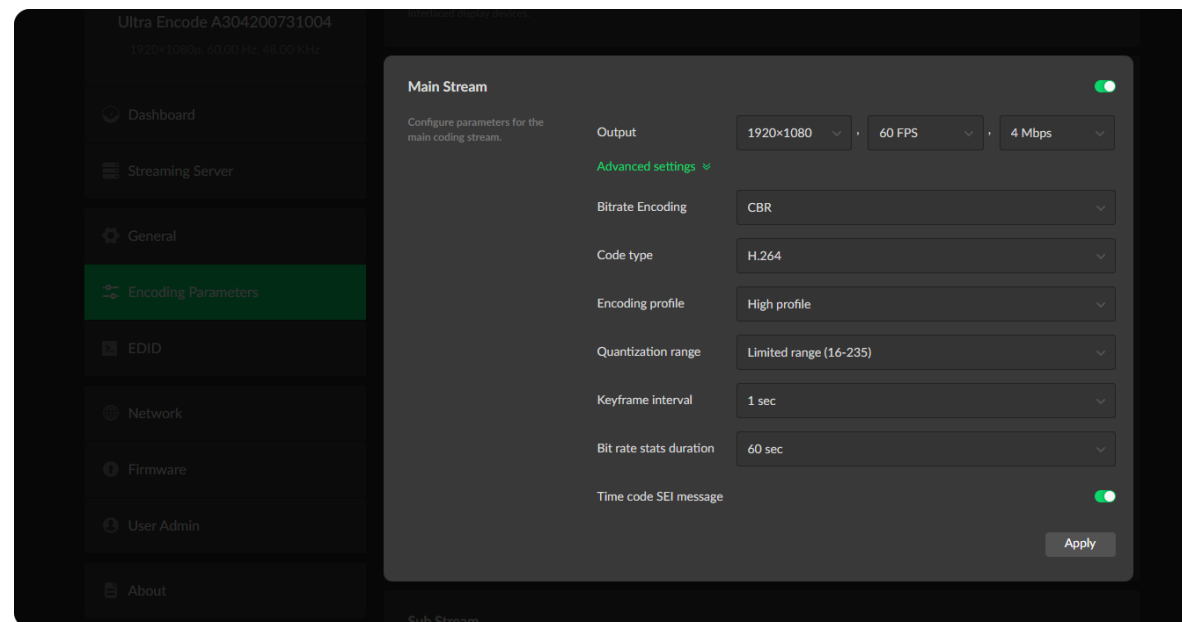


### Set Main Stream

By default, the parameters follow input. Turn on the switch to customize the main stream.


- **Output:** by default, it follows input resolution, frame rate, bitrate. However, when the pixel rate of the input signal reaches 170MHz, 4:4:4/4:2:2, the horizontal and vertical resolutions will both go down to half of the original values.
- **Bitrate Encoding:** options are CBR and VBR. Live stream at CBR (Constant Bitrate) for bandwidth stability. VBR(Variable Bitrate) files vary the amount of output data per time segment.
- **Code type:** options are H.264 and H.265(HEVC) encoders.
- **Encoding profile:** for H.264 encoder, the profiles can be High/Main profile/Baseline. For H.265 (HEVC), it can be Main profile.

- **Quantization range:** options are Full range(0-255), Limited range(16-235).
- **Keyframe interval:** options are 1, 2, 5, 10, 30, 60sec. A smaller number will result in a larger file size and less buffer time for seeing the first frame.
- **Bit rate stats duration:** adjust bit rate by image complexity to ensure the stability of the code stream within the set period. The default value is recommended. A smaller value means more information may need to be discarded when the image data bursts.
- **Time code SEI message:** turn on the switch to get A/V sync between multiple devices which support this SEI message as well. It is off by default. HDMI supports to write timecode extracted from vendor specific (VS) info frame, such as Sony A7S II, then write the timecode into SEI message. SDI supports to write system timecode or SMPTE RP-188 timecode (if present in the input signal) into SEI message.
- **Closed caption SEI message:** turn on the switch to encode closed captions (if present in the input signal) into H.264/H.265 (HEVC) SEI message. Native CEA-608 and 608 over 708 captions are both supported. It is off by default.  
**Note that it is only supported by SDI product.**

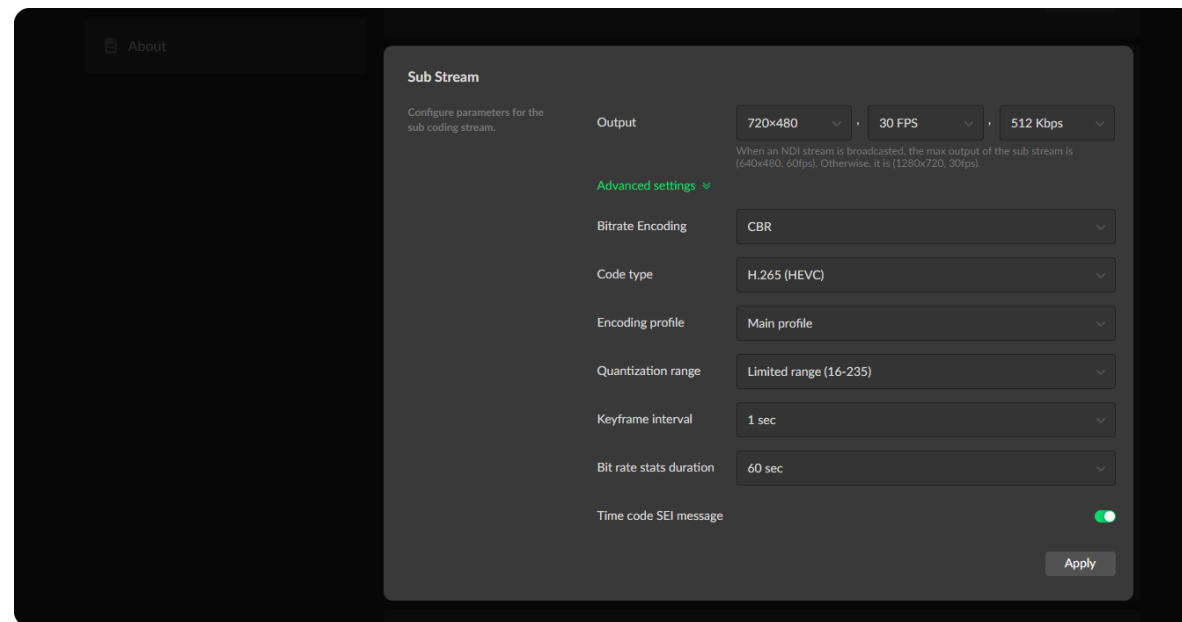

## Set Sub Stream

- **Output:** by default, it is 1280x720p30 at 1Mbps.
- **Bitrate Encoding:** options are CBR and VBR. Live stream at CBR (Constant Bitrate) for bandwidth stability. VBR(Variable Bitrate) files vary the amount of output data per time segment.
- **Code type:** options are H.264 and H.265(HEVC) encoders.
- **Encoding profile:** for H.264 encoder, the profiles can be High/Main profile/Baseline. For H.265 (HEVC), it can be Main profile.
- **Quantization range:** options are Full range(0-255), Limited range(16-235)
- **Keyframe interval:** options are 1, 2, 5, 10, 30, 60sec. A less number will result in a larger file size and less buffer time for seeing the first frame.
- **Bit rate stats duration:** adjust bit rate by image complexity to ensure the stability of the code stream within the set period. The default value is recommended. A smaller value means more information may need to be discarded when the image data bursts.
- **Time code SEI message:** turn on the function to get A/V sync between multiple devices which support this SEI message as well. It is off by default.

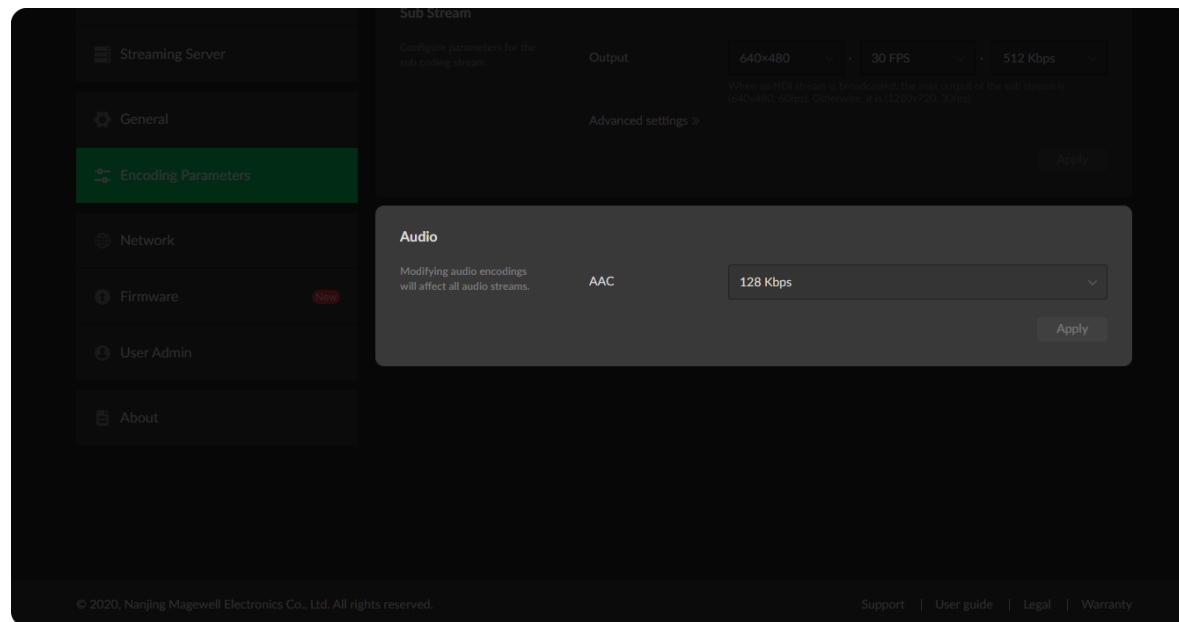

## Set Audio


- **AAC:** all audio streams will be affected by modifying the AAC bitrate. It ranges from 16 to 256 Kbps, and the default value is 128 Kbps.



## EDID

Click and enter the **EDID** tab to check the EDID information. By clicking **Reset to Default** in the bottom right corner of the page, you can cancel your settings.

This tab is only available for HDMI products.

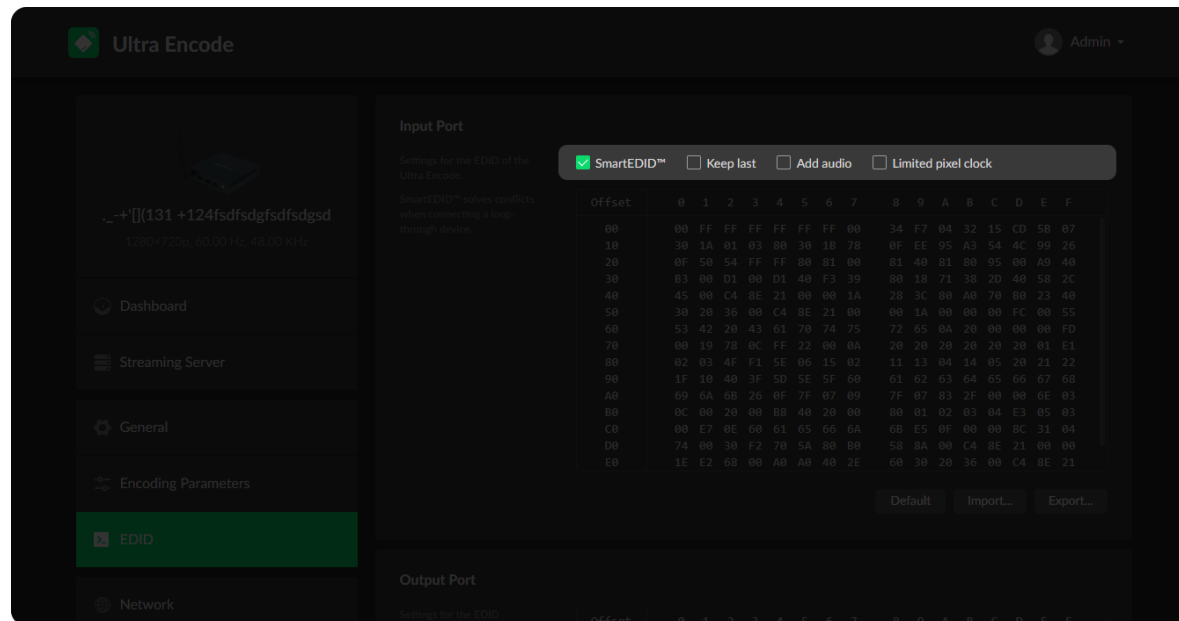

### Setting SmartEDID™

NOTE: This function is available for HDMI products.

#### SmartEDID™

- SmartEDID™ is enabled by default. When it is disabled, other related functions can not be set.
- Depending on the input capability of the encoder and that of the device connected to the loop-through interface, the encoder will smartly select to send the EDID to the video source device, to ensure both the encoder and the loop-through device can obtain the signal they support.

#### Keep last


- Keep the last EDID value used.
- This function is disabled by default. To enable it, the SmartEDID function should also be enabled. When Keep Last is enabled and the loop-through device is disconnected, the current EDID will still be used. The encoder will continue receiving signal so the video capture and encoding continues. Otherwise, the encoder will resend its EDID to the source device for it to redetermine what format of signal to send. As a result, there could be an interruption to the source signal for a short time.

- **Add audio**

- Force the source device to output audio.
- If users connect a monitor which doesn't support audio to the loop-through output, the source device will decide not to output audio. As a result, the device will not get any audio input. If **Add Audio** is enabled, the device will communicate with the video source device, forcing it to output audio.

- **Limited pixel clock**

- If enabled, when the pixel resolution of the loop-through device is beyond the capability of the device, a lower pixel resolution will be used in order to avoid the output producing a blank screen.

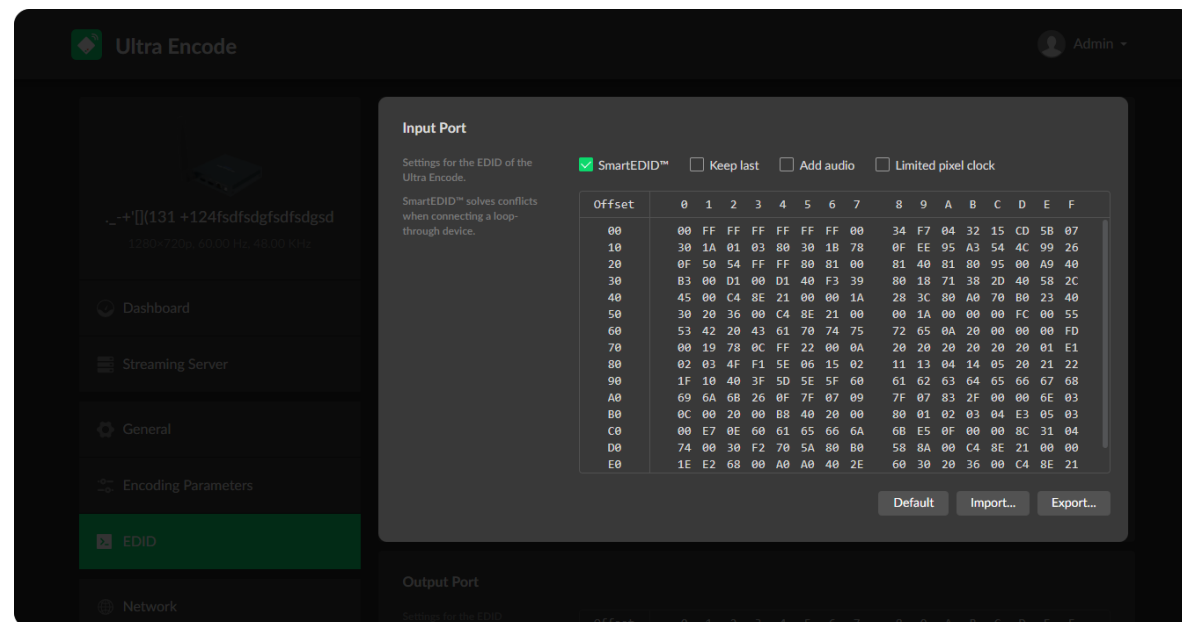

## Setting INPUT EDID

Any of the following actions can be performed on the input EDID of the device.

- **Default:** Click **Default** to reset the current EDID to default values.
- **Import:** Click and select an EDID file to import a local EDID file.
- **Export:** Click and set the file name to export the current EDID as a .bin file.

The screenshot shows a web-based configuration interface for EDID. The left sidebar contains menu items: General, Encoding Parameters, EDID (highlighted), Network, Firmware, User Admin, and About. The main content area is titled 'Output Port' and includes the text: 'Settings for the EDID obtained from the device which output port is connected to.' Below this is a hex dump table with columns for Offset and hexadecimal values.

Offset	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	20	29	54	4C	01	00	00	00
10	01	19	01	03	81	46	27	78	8A	A5	8E	A6	54	4A	9C	26
20	12	45	46	AD	CE	00	81	40	01	01	01	01	01	01	01	01
30	01	01	01	01	01	01	01	1D	00	72	51	D0	1E	20	6E	28
40	55	00	B9	88	21	00	00	1E	9A	29	A0	D0	51	84	22	30
50	50	98	36	00	B9	88	21	00	00	1C	00	00	00	FD	00	32
60	4B	18	3C	00	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	37	35	39	0A	20	20	20	20	20	20	20	20	01	2F	
80	02	03	21	71	4E	06	07	02	03	15	96	11	12	13	04	14
90	05	1F	90	23	09	07	07	83	01	00	00	65	03	0C	00	10
A0	00	8C	0A	D0	90	20	40	31	20	0C	40	55	00	B9	88	21
B0	00	00	18	01	1D	80	18	71	1C	16	20	58	2C	25	00	B9
C0	88	21	00	00	9E	01	1D	80	D0	72	1C	16	20	10	2C	25
D0	80	B9	88	21	00	00	9E	01	1D	00	BC	52	D0	1E	20	B8
E0	28	55	40	B9	88	21	00	00	1E	02	3A	80	D0	72	38	2D

## Checking OUTPUT EDID


OUTPUT EDID shows the EDID of the connected loop-through device.

NOTE: This section is available for HDMI products.

- **Export:** Click and set the file name to export the current EDID as a .bin file.

## Network



Networking information, including Ethernet, Wi-Fi and AP, can be set in the **Network** tab.

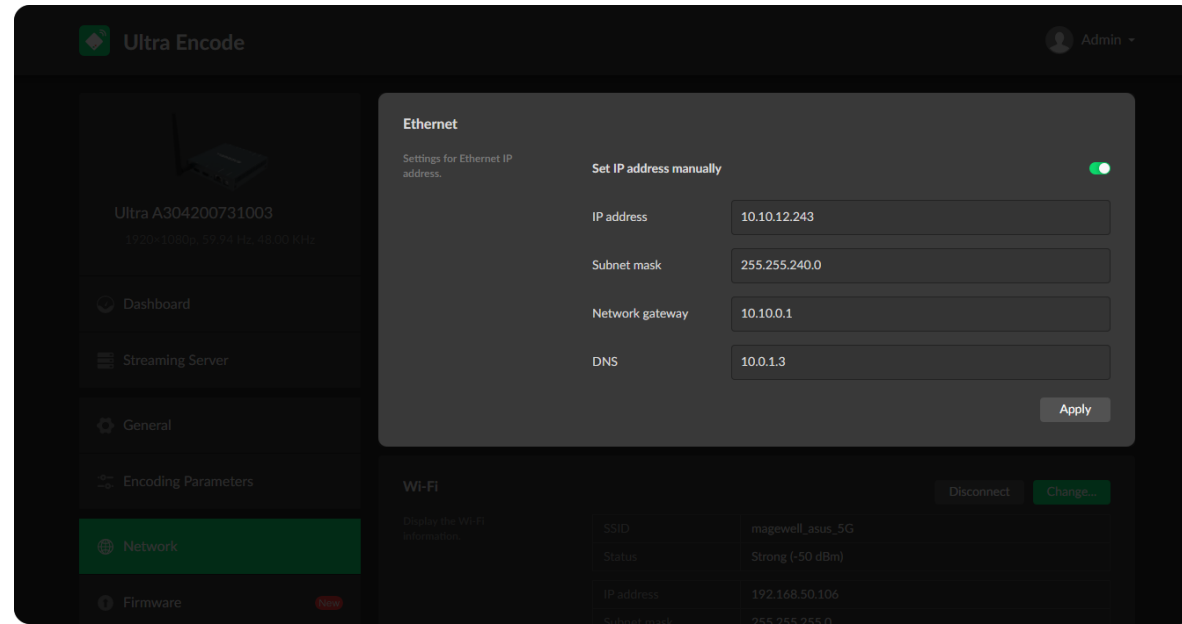

### Set Ethernet

The device automatically detects and connects to the Ethernet when networking to a DHCP-enabled LAN. Or you can set the IP address manually for a fixed IP address or an auto-networking failure.

- **Set IP address manually:** turn on the switch to modify current network setting or when being connected to a non-DHCP network.
- **IP address:** device IP address.
- **Subnet mask:** device subnet mask.
- **Network gateway:** device gateway.
- **DNS:** DNS server IP address.
- **Apply:** make current configuration effective. When prompted, click **Yes**.
- **Verify:** input new IP address to open the Web UI.

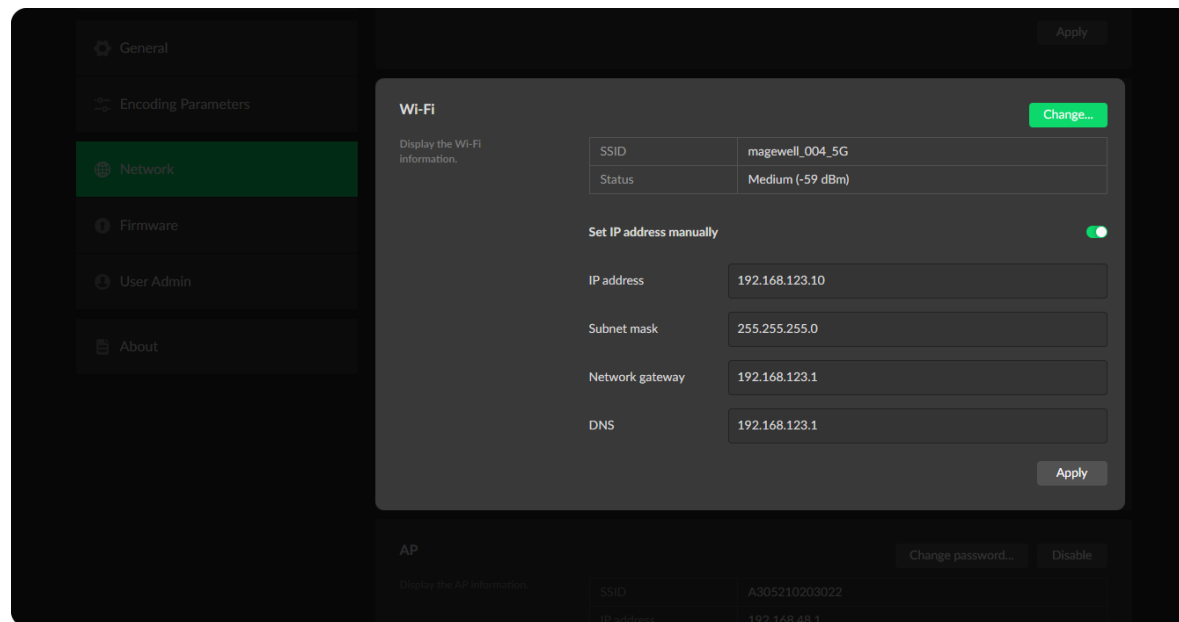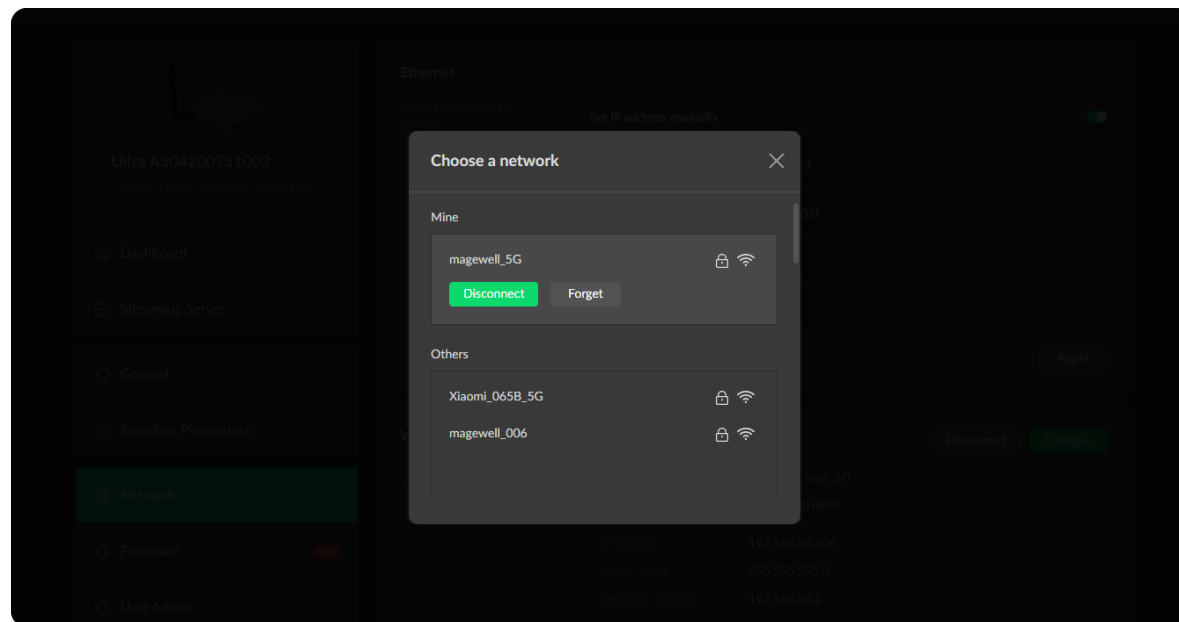

## Set Wi-Fi


16 Wi-Fi network information can be saved for auto-detection.

## Modify Wi-Fi

- **Disconnect:** click to cut off current Wi-Fi network.
- **Change...** click to choose a different WLAN to connect to.
- **SSID:** named after device serial number.
- **Status:** Wi-Fi signal strength.
- **IP address:** WLAN IP address.
- **Subnet mask:** WLAN subnet mask.
- **Network gateway:** WLAN gateway.
- **DNS:** WLAN DNS server IP address.

## Set Wi-Fi manually


- **Set IP address manually:** turn on the switch to modify current network setting or when being connected to a non-DHCP network.
- **IP address:** device IP address.
- **Subnet mask:** device subnet mask.
- **Network gateway:** device gateway.
- **DNS:** DNS server IP address.
- **Apply:** make current configuration effective. When prompted, click **Yes**.
- **Verify:** input new IP address to open the Web UI.

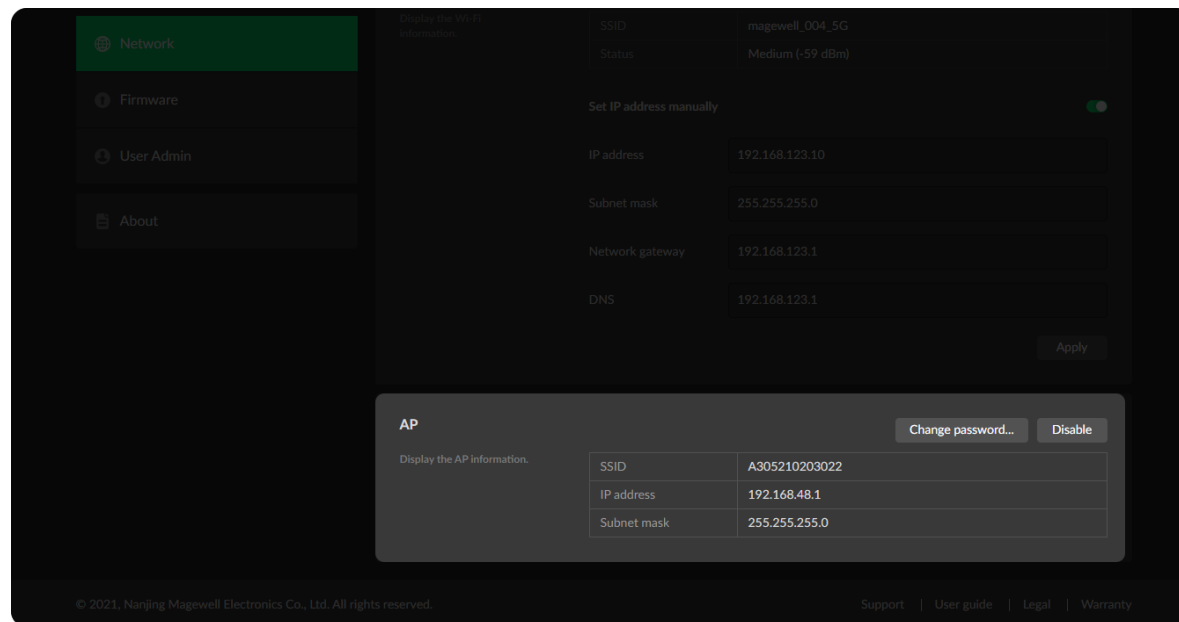

## Set AP

You device can work as an AP to be joined to for remote web control.

- **Disable:** click to turn off AP mode. This renders you unable to manage the device over AP, which is not recommended, especially when you are using wireless network or linux/mac OS.
- **SSID:** by default, it is named after the device serial number.
- **IP address:** fixed as 192.168.48.1.
- **Subnet mask:** fixed as 255.255.255.0.
- **Change password**
  - **AP password:** the default AP password is the last 8-number of the serial number. For example, a serial number A304210101001 indicates the initial AP password is 10101001. It ranges from 8 to 16 characters including A-Z, a-z, 0-9, space .\_-+'[]() and cannot begin or end with a space.

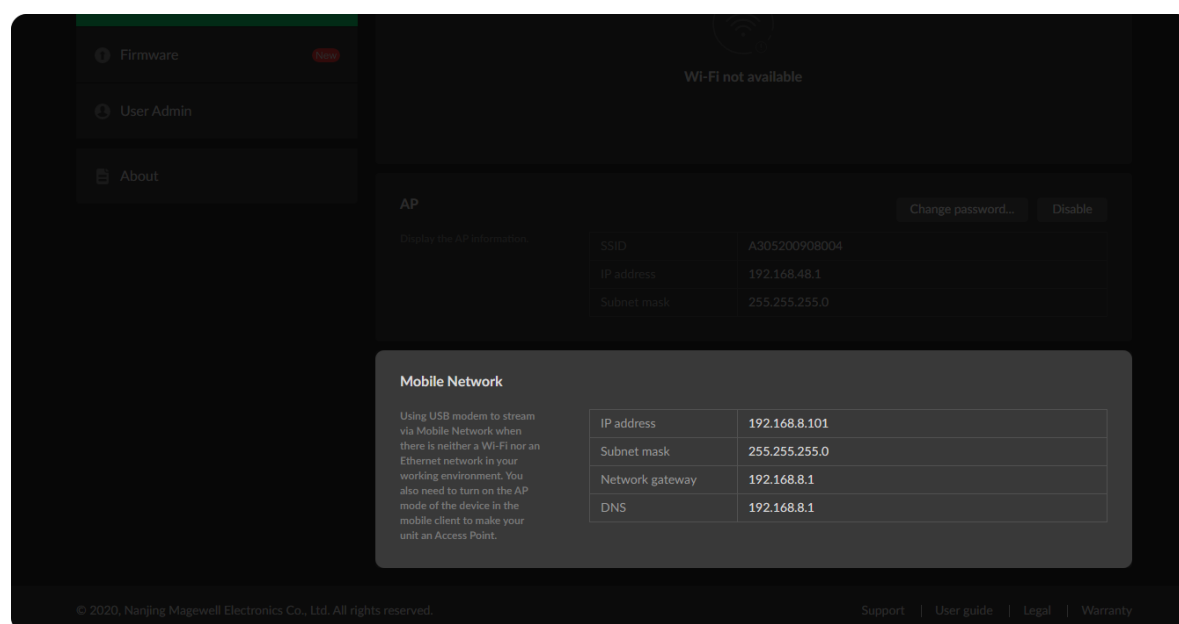


## Set Mobile Network

The encoder supports streaming via a USB modem.

- **IP address:** IP address assigned by the USB modem.
- **Subnet mask:** subnet mask.
- **Network gateway:** gateway.
- **DNS:** DNS server IP address.



## Firmware

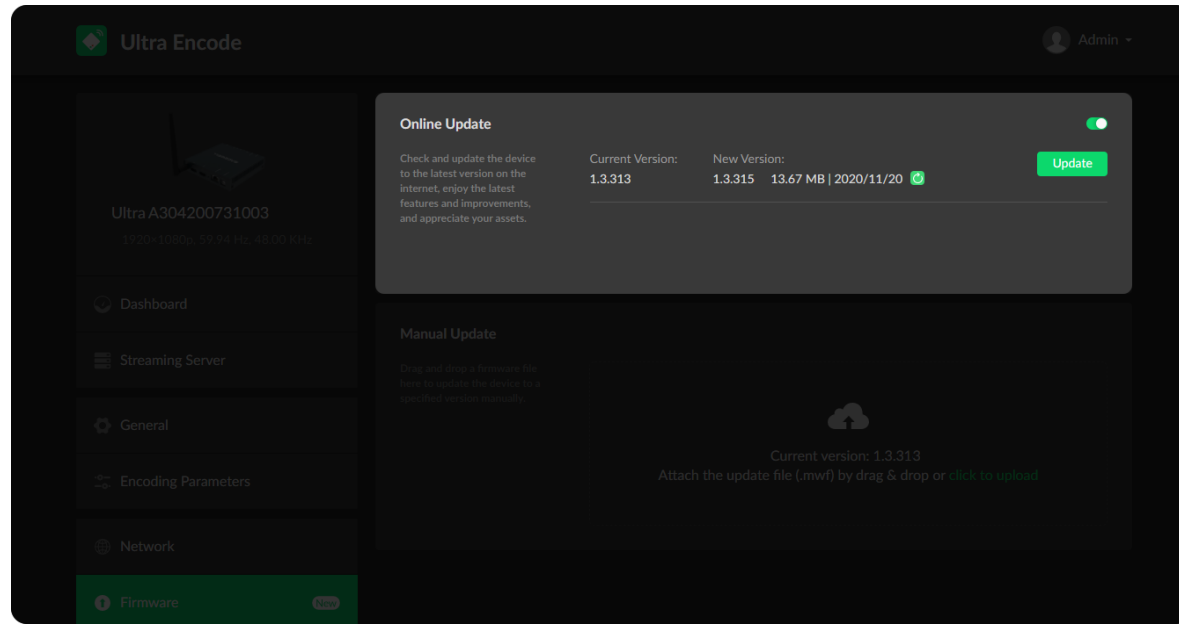
Detect and update firmware to the latest version online, or you can manually add a firmware file to update the unit to specified version.





### Online Update

By default, the function is on. When a new version is detected, a **New** icon will flow on the control pane.

1. Turn on  switch, and the online update function is on. The unit would detect the latest released firmware automatically when connecting to the Ethernet.
2. Click  icon to check for the latest firmware manually.
3. Click **Update** button to download and install the new version file if any. Do not disconnect from the power source or perform any operation while updating the firmware as this could damage your gear. After a successful update, the device will restart automatically.
4. Verify: click  checking for updates again. "Your firmware is up to date." indicates the update is successful.

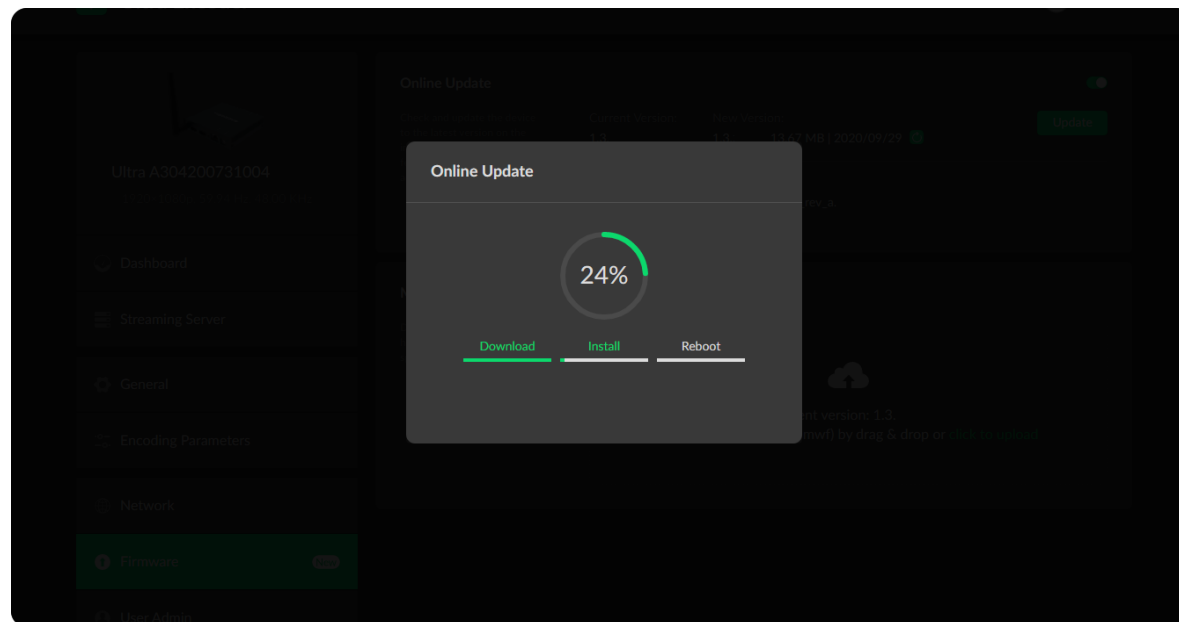

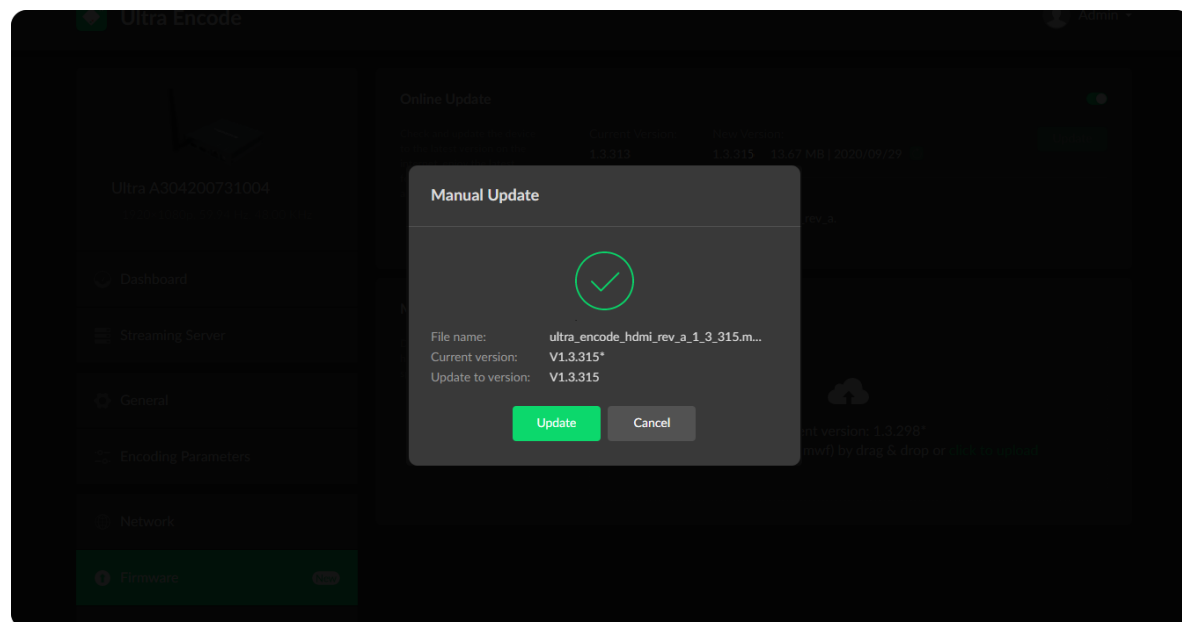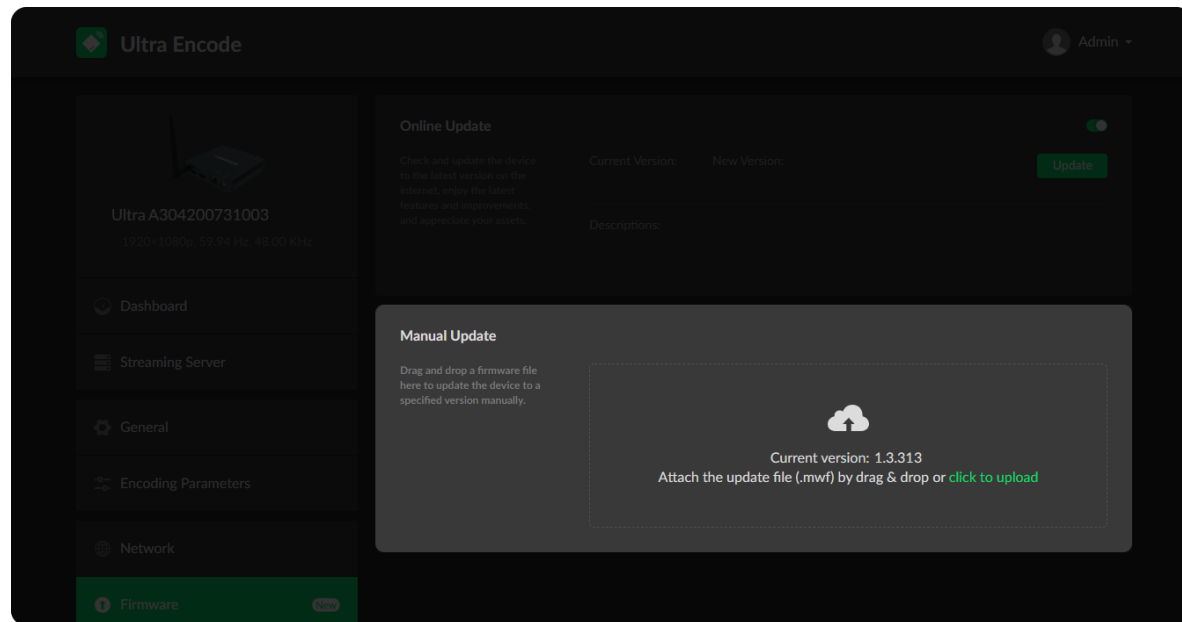

## Manual Update

1. Click on **click to update** to select the **.mwf** firmware update file from your local storage, or just drag and drop the file from your computer into the upload zone.


Download firmware file from [our official website](#).

The device will automatically verify the update file and upload the file after the file verification is passed.

2. Click **Update** to download and install the new version file. Then the device will reboot to complete the update.

Do not disconnect from the power source or perform any operation while updating the firmware as this could damage your gear.

3. Verify: check the **Firmware version** in **Dashboard** or **Firmware** tab. It should be the same as your target version number.

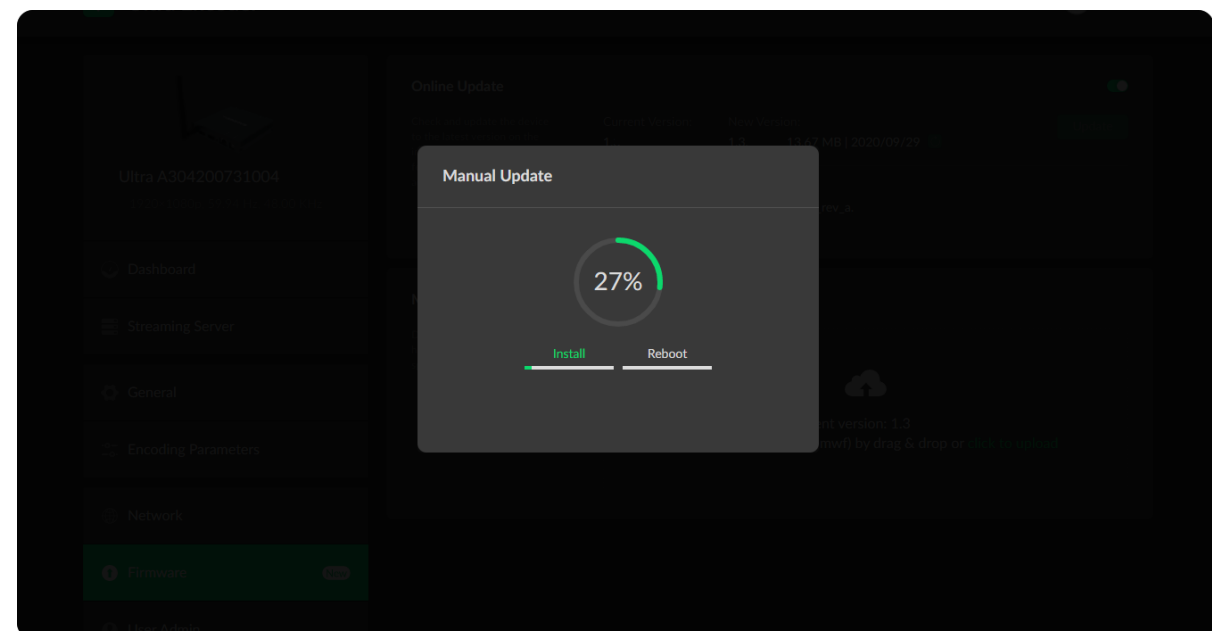




## User Admin

Administrator is allowed to perform the following tasks. The **User Admin** tab is invisible when you log in as a general user.

- [Create/Remove General User Accounts](#)
- [Modify User Password](#)

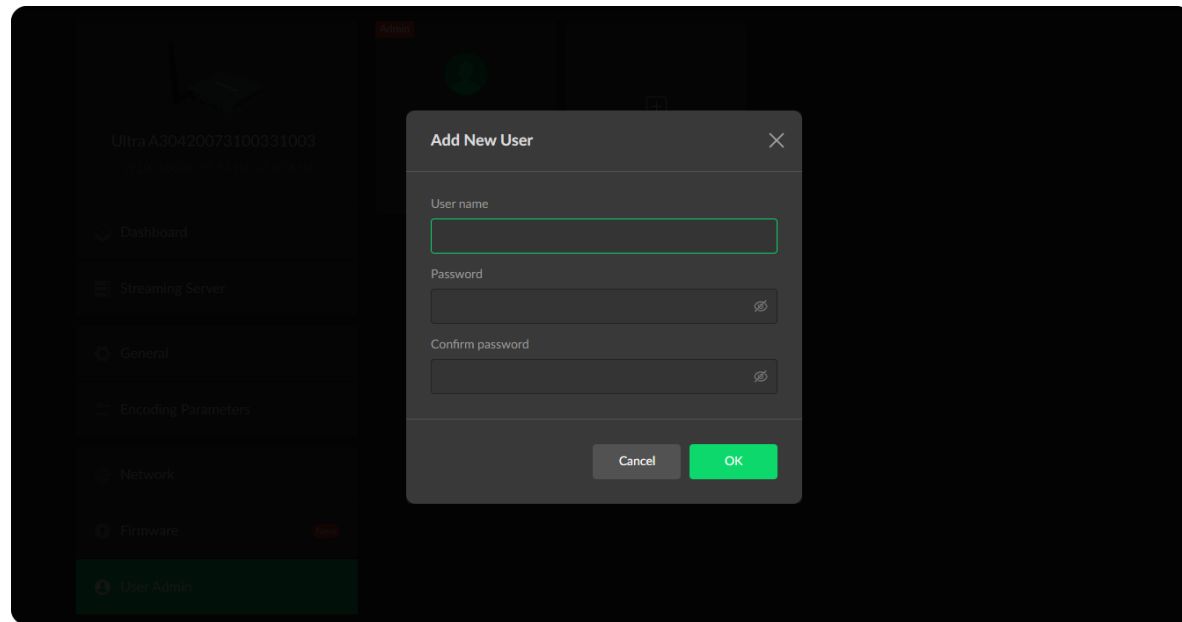

### Create/Remove General User Accounts

After signing in with default admin account, you may need to add general users to give them permissions to do basic operations, like monitoring the device, or setting some of the parameters.

1. Access the Web UI, and sign in as administrator.
2. Go to **User Admin** tab.
3. Click **Add user**.
4. Enter username, password, and confirm your password.
  - The username is a string of 3 to 12 characters, which contains the letters A-Z, a-z, numbers 0-9 and underline.
  - The password is a string of 1 to 32 characters, which contains the letters A-Z, a-z, numbers 0-9 and special characters `_~!@#$%^&*~+=.`
5. Click **OK**.


You can add up to 15 general users.
6. To delete a user: Click **Delete** in the username card. When prompted, click **Yes**.


## Modify User Password


Set Password in the following ways.

1. [Modify user password logged-in](#) via drop-list beside your avatar at the top right
2. [Modify a specified user password](#) in **User Admin** tab with admin account

### Modify current logged-in user password


1. Log in Web UI.
2. Click the drop-list icon  beside your avatar icon, and click **Change password**.
3. In the pop up window, type in your old password, the new password, and confirm your new password.  
The password is a string of 1 to 32 characters, which contains letters A-Z, a-z, numbers 0-9 and special characters `_~!@#$%^&*~+=.`
4. Click **OK**.

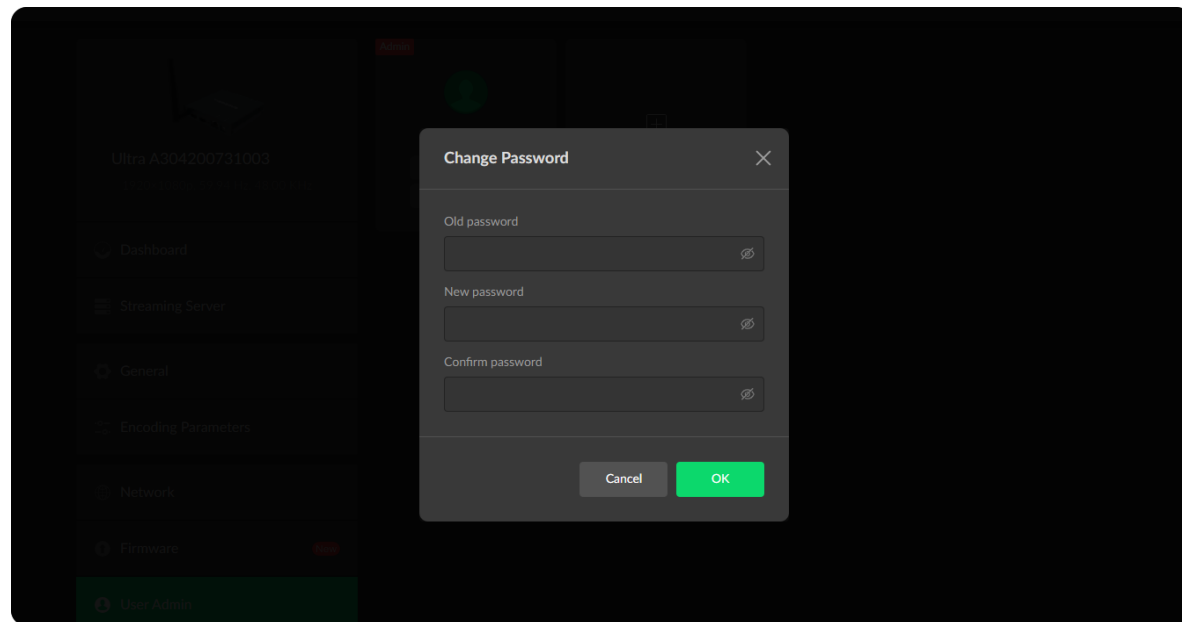

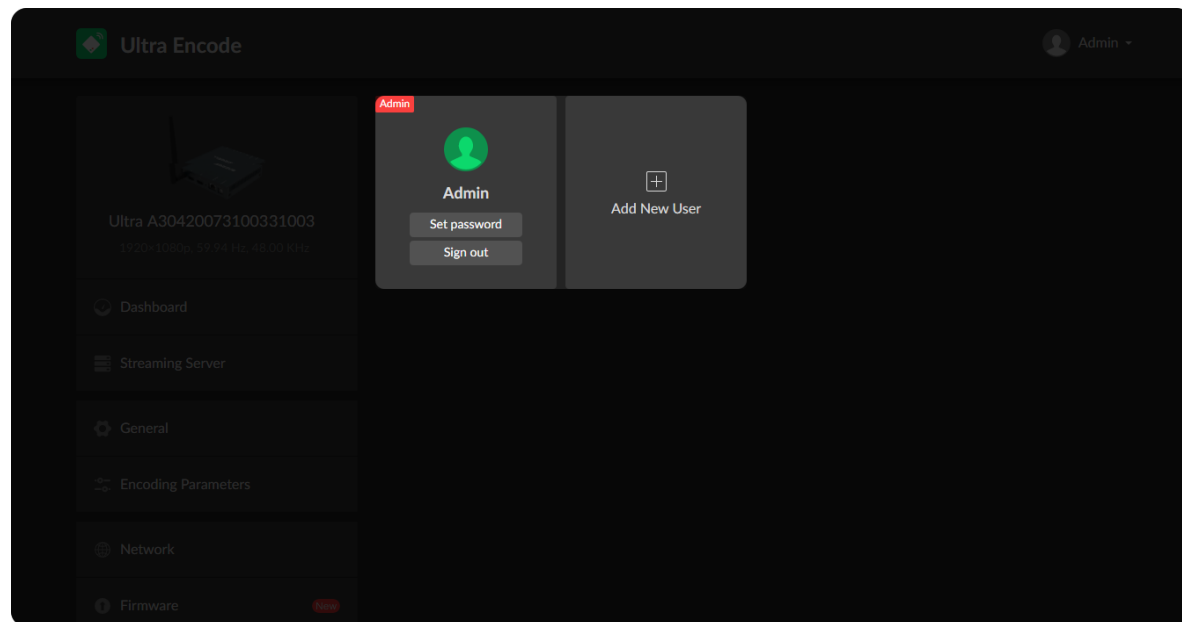


### Modify a specified user password

1. Access the Web UI and sign in with the administrator account.
2. Go to **User Admin** tab, then you can change any user's password.
3. Click **Set password**.
4. In the pop up window, type in and confirm your password.  
The password is a string of 1 to 32 characters, which contains letters A-Z, a-z, numbers 0-9 and special characters \_~!@#\$\$%^&\*~+=.
5. Click **OK**.

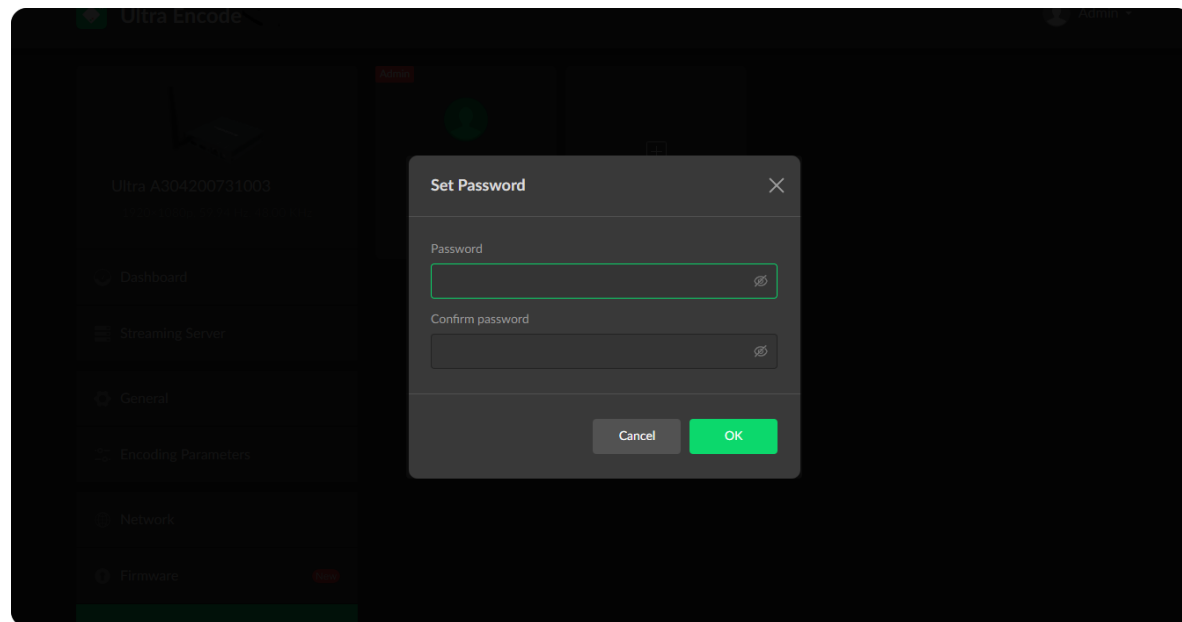


## About

Obtain basic data for device maintenance in **About** tab.

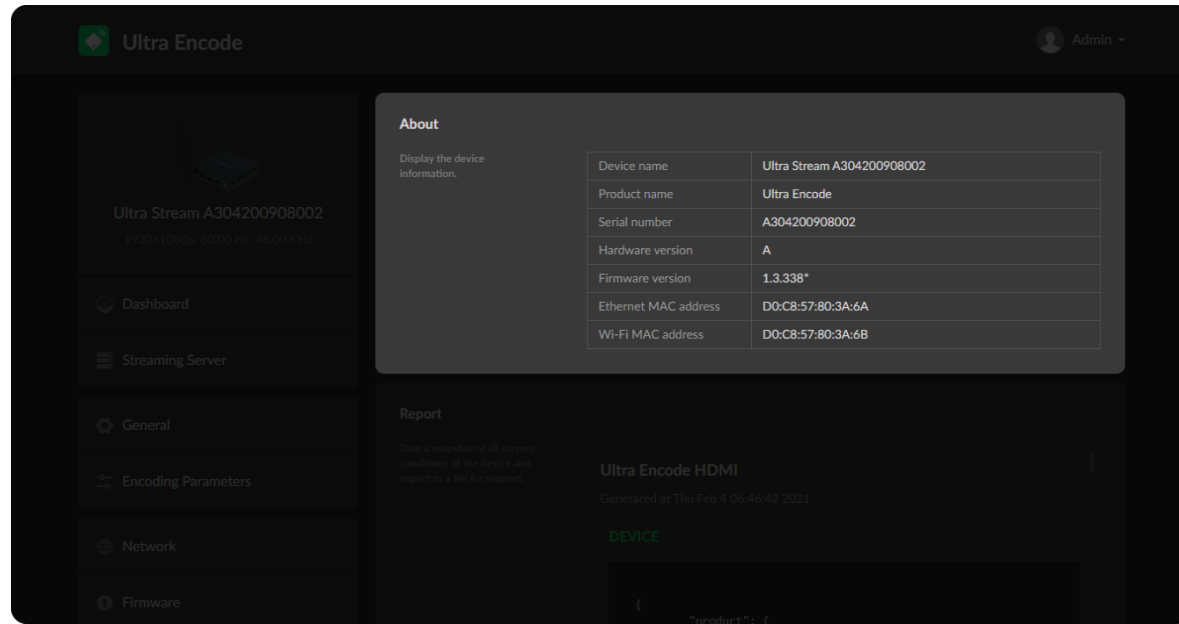

### Check System Information

- **Device name:** device name which can be modified in the [General > Device name](#) tab.
- **Product name:** device family name.
- **Serial number:** device serial number.
- **Hardware version:** device hardware version.
- **Firmware version:** device firmware version, which can be update in the [Firmware](#) tab.
- **Ethernet MAC address:** device Ethernet MAC address.
- **Wi-Fi MAC address:** device Wi-Fi MAC address.

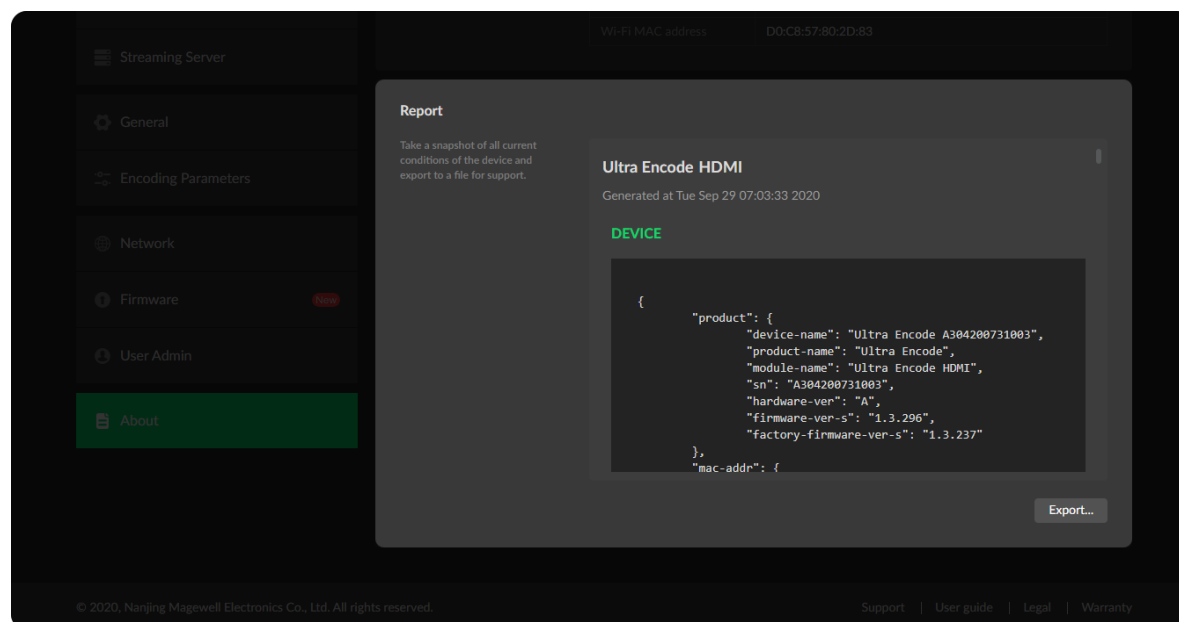

### Export Configuration Files

Export reports from your encoder when you want to get help from the Magewell Support team. These files will help our support engineers get a better understanding of your device status and other related information.

1. Go to **About > Report**.
2. Click **Export...** to generate a .html file.
3. When prompted, click **Export**.

# FAQ

## How to turn on/off AP mode

AP mode is on by default. You can go to **Network > AP** section to turn on/off the AP mode and change AP password.

## Can Ultra Encode stream to multiple destinations at the same time?

- Allow simultaneous sessions over the same streaming protocol.
  - Up to 6 sessions of TS over RTP and TS over UDP simultaneously.
  - Up to 6 sessions of SRT Caller and SRT Listener simultaneously, containing one SRT Listener session at most.
  - Up to 6 sessions of RTMP and RTMPS simultaneously. It means that as long as the destination server allows, RTMP/RTMPS video platforms such as Twitch, Facebook, YouTube can be streamed to at the same time with your accounts.
- Stream only 1 session of HLS (push), RTSP, or NDI HX (NDI|HX2).

## What is the encoding format for live broadcast?

Two data encoding methods for both main and sub streams: CBR(constant bitrate) and VBR(variable bitrate) - which can be modified in the WebUI > **Encoding Parameters**.

## Can I set one live stream server to use the main stream and the other to use the sub stream?

Yes. You can select the main stream or sub stream for each session.



## What to do if I forget the Web UI password?

- Forgot admin password:  
Press a paperclip or similar object into the hole shown in the figure. Hold the paperclip in place until all indicators but power flash twice, then remove the paper clip.  
Be cautious that resetting would lose all your configuration data.
- Forgot a general user's password:  
Sign in Web UI with the administrator account, then go to **User Admin** tab, then you can change the specific user's password.

# Support

## Get the Latest Information

If you have any problems using Magewell products or need more technical information, please visit the following.

- Tutorial video: [Magewell TV](#)
- YouTube channel: [Magewell Video Capture Device](#)
- Knowledge base: [Ultra Encode Support](#)

## Technical Support

**Ticket System:** If you have any questions using Magewell products or need technical assistance, please submit and track your inquiries by clicking [here](#).

# Warranty

## Limited Warranty

Except otherwise set between you and Magewell in advance in a written form, the free limited warranty service starts from the date on your proof of purchase. The proof can be: sales contract, formal sales receipt, invoice or delivery note. The earliest date of these proofs is the starting date of the free limited warranty.

The period of free limited warranty goes as below:

- Ultra Encode Family: two (2) years;
- The power adapter provided as accessories: one (1) year;

## How to get the limited warranty

1. Please contact the Magewell support team by email (support@magewell.net) first, to determine whether your problem can only be solved by returning it to Magewell for repair. Magewell might ask you to take photos of the front and back of the defective products.
2. Magewell will issue an RMA letter to you if it is confirmed that you need to return the faulty product for further examination or repair. Please fill in the RMA with necessary information as required.  
If it is regular repair, you will be responsible for the shipping cost, duties and insurance cost (if applicable); if the product is DOA, Magewell will be responsible for the shipping cost.
3. If some components need to be replaced, Magewell will decide to repair, renovate or replace the components by itself. Magewell may use new or repaired component to repair the product. The repaired product can be expected to work normally and the performance to remain the same. Repaired products can work in a good working condition and at least function the same as the original unit. The original replaced component will become the property of Magewell and components which are replaced for the client will become his/her property.
4. If the product is within warranty, Magewell will repair or replace the faulty units at its own discretion. In circumstances where the faulty unit is replaced by another one, Magewell may use new, repaired or renovated units. The faulty unit will then become the property of Magewell while the replacement unit will become the property of the purchaser.
5. If the warranty expires, Magewell will inform the purchaser whether the products can be repaired and the maintenance costs they need to pay. If purchasers



decide to repair, Magewell will repair, renovate, or replace the components after receiving the maintenance costs. If purchasers give up repairing, Magewell will dispose of the faulty unit if the purchaser chooses that option.

6. The repaired or replaced product assumes 1) the remaining term of the Warranty of the replaced unit or faulty unit; 2) ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. The extended warranty is only valid for repaired/replaced components.
7. The period of service depends on the client's location (country and area) and the product.

To view the complete warranty policy, please visit [www.magewell.com/quality-assurance](http://www.magewell.com/quality-assurance).

# Notice

Copyright © 2022 [Nanjing Magewell Electronics Co., Ltd.](#)

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law.

## Trademarks

HDMI, the HDMI logo and High-Definition Multimedia interface are trademarks or registered trademarks of HDMI Licensing LLC. Windows is trademark or registered trademark of Microsoft Corporation. OS X and macOS are trademarks or registered trademarks of Apple Inc. NDI is trademark or registered trademark of NewTek Inc. Other trademarks and company names mentioned are the properties of their respective owners.

## About this Document

- This document is for reference only. Please refer to the actual product for more details.
- The user shall undertake any losses resulting from violation of guidance in the document.
- In case that PDF document cannot be opened, please upgrade the reading tool to the latest version or use other mainstream reading tools.
- This company reserves rights to revise any information in the document anytime; and the revised contents will be added to the new version without prior announcement. Some functions of the products may be slightly different before and after revision.
- The document may include technically inaccurate contents, inconsistencies with product functions and operations, or misprint. Final explanations of the company shall prevail.
- The only warranties for Magewell products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Magewell shall not be liable for technical or editorial errors or omissions contained herein.